

# User Manual

(Parts 1390-70-B-XXX, 1390-75-B-XXX, and 1390-75-C-XXX)



Gill Instruments Limited  
Saltmarsh Park, 67 Gosport Street, Lymington,  
Hampshire, SO41 9EG, UK  
Tel: +44 1590 613500, Fax: +44 1590 613555  
Email: [anem@gillinstruments.com](mailto:anem@gillinstruments.com) Website: [www.gillinstruments.com](http://www.gillinstruments.com)

### Table of Contents

|                                               |           |
|-----------------------------------------------|-----------|
| <b>1. Welcome to the WindObserver manual.</b> | <b>4</b>  |
| 1.1. Overview of Content                      | 4         |
| 1.2. Description of Icons                     | 4         |
| 1.3. General Notes                            | 5         |
| 1.4. User Manual Revision History             | 5         |
| <b>2. Product Overview</b>                    | <b>6</b>  |
| <b>3. Pre-Installation</b>                    | <b>6</b>  |
| 3.1. Equipment supplied                       | 6         |
| 3.2. WindObserver 70/75 Part Numbers          | 6         |
| 3.3. WindObserver Accessories                 | 7         |
| 3.4. WindObserver FCC                         | 7         |
| 3.5. Right to change and revise               | 8         |
| 3.6. Packaging                                | 8         |
| 3.7. WindObserver Specification               | 8         |
| 3.8. WindObserver Standard Equipment          | 8         |
| 3.9. Downloadable Software                    | 8         |
| <b>4. Requirements &amp; Installation</b>     | <b>9</b>  |
| 4.1. Requirements                             | 9         |
| 4.2. Installation                             | 10        |
| 4.3. Installation Guidelines                  | 10        |
| 4.4. Bench system test                        | 11        |
| 4.5. Cabling                                  | 12        |
| 4.6. Power supplies                           | 13        |
| 4.7. Mechanical Installation                  | 14        |
| <b>5. Message Formats &amp; Options</b>       | <b>25</b> |
| 5.1. Wind Speed format                        | 25        |
| 5.2. Output format                            | 25        |
| 5.3. Units                                    | 26        |
| 5.4. Output rate                              | 26        |
| 5.5. Averaging (Digital Data)                 | 27        |
| 5.5.1. G Command Averaging                    | 27        |
| 5.5.2. Road Weather Averaging (RWA)           | 27        |
| 5.6. Options                                  | 31        |

|                                                             |                                            |    |
|-------------------------------------------------------------|--------------------------------------------|----|
| 5.7.                                                        | ASCII message format (UV, and Polar) ..... | 32 |
| 5.8.                                                        | NMEA Format .....                          | 35 |
| 5.9.                                                        | Averaging Format (Modes 14 and 15).....    | 36 |
| Appendix A - Technical Specification .....                  |                                            | 37 |
| Appendix B - Connector and Cable Assembly .....             |                                            | 39 |
| Appendix C - Connections and default setup .....            |                                            | 42 |
| Appendix D - Networking.....                                |                                            | 46 |
| Appendix E - WindObserver 70/75 Safe Mode .....             |                                            | 48 |
| Appendix F - Configuring .....                              |                                            | 50 |
| Appendix G - WindObserver 70/75 ASCII Data Output.....      |                                            | 58 |
| Appendix H - WindObserver 70/75 NMEA 0183 Data Output ..... |                                            | 59 |
| Appendix I - Polled Mode Commands.....                      |                                            | 60 |
| <b>Appendix J – WindObserver Modbus:</b> .....              |                                            | 61 |
| <b>Appendix K – WindSet Software</b> .....                  |                                            | 64 |
| Appendix L - WindView Software .....                        |                                            | 65 |
| Appendix M - WindObserver 70/75 Status Codes.....           |                                            | 70 |
| Appendix N - Maintenance & Fault-Finding.....               |                                            | 71 |
| Appendix O - Glossary & Abbreviations .....                 |                                            | 74 |
| Appendix P - Guarantee & FCC.....                           |                                            | 76 |
| <b>Appendix Q - Principle of operation</b> .....            |                                            | 77 |

## 1. Welcome to the WindObserver manual.

### About this manual

This manual provides the information needed to get the best results from WindObserver 70/75.

The most recent version of this manual is available at [gillinstruments.com](http://gillinstruments.com).

**Please read this manual before setting up and installing WindObserver 70/75.**

### 1.1. Overview of Content

The manual is split into 5 chapters. Each chapter represents an activity in the use of the product. Additional detailed information is contained in the Appendices at the end of the manual.

- Chapter 1 explains how the manual is set out
- Chapter 2 provides a brief overview of the product
- Chapter 3 provides the information needed to Pre-install the product
- Chapter 4 explains the requirements & installation of the product
- Chapter 5 explains message formats & options for the product

### 1.2. Description of Icons

The following icons are used in this manual.

| Icon                                                                                | Description                                            |
|-------------------------------------------------------------------------------------|--------------------------------------------------------|
|  | A note that is important and that should be observed   |
|  | Information or a recommendation to ensure best results |
|  | The start of a set of instructions                     |

### 1.3. General Notes



Before WindObserver 70/75 is used for the first time it is essential to read and understand this manual. Please keep the manual safe for future reference.



Care should be taken with WindObserver 70/75 at all times. The product should be transported to site in the box, and only removed when ready to install.



During installation WindObserver 70/75 should be supported and care should be taken not to drop the product



Care should be taken when wiring the WindObserver 70/75 to power and communications.



Maintenance should be limited to the procedures described in this manual. Additional maintenance or cleaning may damage the sensors.



No attempt should be made to repair any of the parts of the product. Any attempt to do so will invalidate the warranty provided by Gill Instruments.

### 1.4. User Manual Revision History

| Document Version | Release Date  | Key Changes                                      |
|------------------|---------------|--------------------------------------------------|
| Iss 8            | December 2022 | New manual template.                             |
| Iss 9            | July 2026     | Addition of Modbus RTU<br>Update of output rates |

## 2. Product Overview

The WindObserver 70/75 wind sensor is a very robust unit with no moving parts, outputting wind speed and direction. The units of wind speed, output rate and formats are all user selectable.

The WindObserver 70/75 is available with optional enhanced de-icing heating (recommended if severe icing is likely).

The WindObserver 70/75 can be used in conjunction with a PC, data logger or other device, provided it is compatible with the RS422 output. Multiple units can be networked if required.

The output message format can be configured in Polar, UV (2-axis), NMEA (0183 Version 3), Tunnel formats, and as either a Continuous output or Polled (requested by host system), detailed in full in Section 8 Message Formats & Options.

A Modbus version of the WindObserver 75 is available which is designed to communicate over 2-wire RS485


## 3. Pre-Installation

### 3.1. Equipment supplied

WindObserver 70/75 and Installation kit, 1390-10-163 (see appendix B)

### 3.2. WindObserver 70/75 Part Numbers

Available parts are as detailed below: -

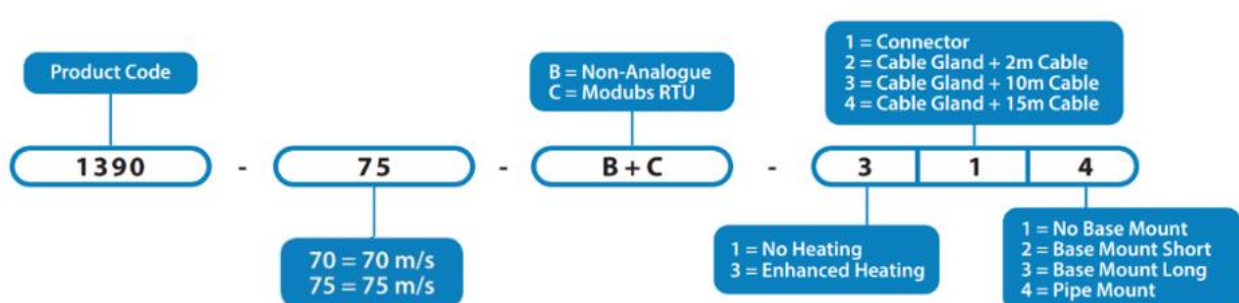

### 3.3. WindObserver Accessories

| Item                                                       | Part Number |
|------------------------------------------------------------|-------------|
| Cable 3 Pair twisted and Shielded wires, 24awg, per metre. | 026-02660   |
| Cable 4 Pair twisted and Shielded wires, 24awg, per metre. | 026-03156   |
| Cable 9 Pair twisted and Shielded wires, 22awg, per metre. | 026-02663   |
| Integrity Check Chamber                                    | 1277-00-052 |
| 19-way Connector kit                                       | 1390-10-163 |
| Base Mount Short                                           | 1390-30-154 |
| Base Mount Long                                            | 1390-30-155 |
| Pipe Mount                                                 | 1390-30-156 |
| Gill Bracket Mounting Adaptors                             | 1771-PK-116 |

After you have successfully set up the WindObserver 70/75, we strongly advise that you then go back and read the rest of the manual to ensure that you get the best results from the WindObserver 70/75.

### 3.4. WindObserver FCC

**This product carries the CE and UKCA marks. A copy of the Declaration of Conformity can be downloaded from [www.gillinstruments.com](http://www.gillinstruments.com).**

WindObserver 70/75 complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: -

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### 3.5. Right to change and revise

Gill Instruments reserve the right to change or revise the product without notice or the obligation to notify any person or organisation of such change or revision.

Gill Instruments reserve the right to change or revise the information supplied in this manual without notice or the obligation to notify any person or organisation of such change or revision.

The reproduction and distribution of the documentation and software supplied with this product and the use of its contents is subject to written authorization from Gill Instruments.

### 3.6. Packaging

Whilst the WindObserver 70/75 is being moved to its installation site, the unit should be kept in its packaging. Retain the packaging for use if the unit must be moved or returned to Gill Instruments.

### 3.7. WindObserver Specification

The WindObserver Specification can be found in Appendix A

### 3.8. WindObserver Standard Equipment

WindObserver 70/75 is supplied with:

- Mounting kit & gasket
- Connector kit (if connector base option ordered)
- Base mount (if Base mount option ordered)

### 3.9. Downloadable Software

Three software packages are available to help customers use the WindObserver 70/75:

- Wind – this software can be used as a terminal program to set-up the product.
- WindView – this software can be used to view and log data provided by the product.
- WindSet – this software must be used for configuration of the WindObserver Modbus

All software packages can be downloaded from [www.gillinstruments.com](http://www.gillinstruments.com)



## 4. Requirements & Installation

### 4.1. Requirements



**Host system** - One of the following:

- PC with an internal or external interface compatible with the RS422 output from the WindObserver 70/75 or compatible with the RS485 output from the WindObserver Modbus.
  - Other equipment with I/O compatibility to the WindObserver 70/75 option selected.  
For example, if the unit has Digital outputs, a Data Logger, Chart Recorder, or PC fitted with an ADC card.
- Networking - Multiple WindObserver 70/75 units can be networked.

**Software** - One of the following:

- Gill Wind Software used as a Terminal program only (Wizard and Sync Comms not applicable). Wind will run on PC's up to and including Windows 11 and can be downloaded free from: -  
<http://www.gillinstruments.com/main/software.html>
- TeraTerm or PuTTY.
- Other Terminal Emulation software packages.

#### Cable and Junctions Box

To connect between the WindObserver 70/75 and the host system. The unit is supplied with a base mounted connector system or flying cable options (requiring a mast mounted junction box (not provided)) for onward connection.

If using a flying cable option, it must be retained with a cable tie within 150mm of the base of the anemometer.

#### Mounting Bracket

The WindObserver 70/75 can be supplied with a short or long base mount to use with a mounting adaptor

The WindObserver 70/75 can be attached to the bracket via the four tapped holes in the base mount fitted to the unit. The gasket supplied can be fitted between the sensor and its mounting bracket when it is important to minimise the effects of corrosion should two dissimilar metals be used.

In the event that the mounting bracket supplied by the customer is not flat or does not form complete support for the anemometer base; the customer must fit a mounting ring as shown in Figure 2a.

#### Mounting Pole

The WindObserver 70/75 can be supplied with a pole mount that provides the option to attach to a pole with or without a thread (pole not provided). The WindObserver 70/75 can be retained to the pole via the three tapped holes in the pole mount fitted to the unit.



### 4.2. Installation

Do NOT remove the black “rubber” transducer caps. Warranty is void if the green security seal is damaged or removed.

Take care not to knock the four Transducer arms. All the time the WindObserver 70/75 is not in its final location, it should be protected from damage by keeping it in the original packaging as long as possible, treating it as a delicate instrument.

If an Intrinsically Safe (IS) device is required, the I.S. WindObserver must be used - the WindObserver 70/75 is NOT an IS device.

Warranty is void if the unit case is removed.

When selecting a site three attributes need to be considered:

- Physical location and obstructions
- Distance from the power supply and data collection system
- EMC interference

### 4.3. Installation Guidelines

The WindObserver 70/75 has been designed to meet and exceed the stringent standards listed in its specification. Operating in diverse environments all over the world, WindObserver 70/75 requires no calibration or adjustment whatsoever.

As with any sophisticated electronics, good engineering practice should be followed to ensure correct operation.

- Always check the installation to ensure the WindObserver 70/75 is not affected by other equipment operating locally, which may not conform to current standards, e.g., radio/radar transmitters, boat engines, generators etc.  
Guidelines –
- Avoid mounting in the plane of any radar scanner – a vertical separation of at least 2m should be achieved.
- Radio transmitting antennas, the following minimum separations (all round) are suggested
  - VHF IMM – 1m
  - MF/HF – 5m
  - Satcom – 5m (avoid likely lines of sight)
- Ensure the product is correctly earthed in accordance with this manual
- Use cables recommended by Gill, keeping the length below the maximum allowed (*See Section 4.5*) Where the cables are cut and re-connected (junction boxes, plugs and sockets) the cable screen integrity must be maintained, to prevent the EMC performance being compromised.
- Earth loops should not be created – earth the system in accordance with the installation guidelines. (*See Connections Appendix C*)
- Ensure the power supply operates to the WindObserver 70/75 specification at all times.

Avoid turbulence caused by surrounding structures that will affect the accuracy of the WindObserver 70/75 such as trees, masts and buildings. The World Meteorological Organisation makes the following recommendation:

- The standard exposure of wind instruments over level open terrain is 10m above the ground. Open terrain is defined as an area where the distance between the sensor and any obstruction is at least 10 times the height of the obstruction.

When installing the unit degrease the unit and hold with lint free gloves to reduce the build-up of deposits.

Immunity test requirements for equipment intended to be used in an industrial electromagnetic environment have been applied. These test levels are above the levels expected to be experienced in normal use due to the above recommended siting conditions, but disturbances may be expected 150 to 200kHz. If any interruption to performance is experienced due to external electromagnetic signals the product will automatically return to specification once the signals levels have diminished.

#### 4.4. Bench system test



*Prior to physically mounting the WindObserver 70/75 in its final location, we strongly recommend that a bench system test be carried out to confirm the system is configured correctly, is fully functional and electrically compatible with the selected host system and cabling (preferably utilising the final cable length). The required data format, units, output rate, and other options should also all be configured at this stage. If an Integrity Check Chamber (ICC) has been purchased (refer to Appendix L p.68)*

### 4.5. Cabling

A RS422 compatible cable should be used, with the number of twisted pairs matching the application.

**Generic description** – Twisted pairs with drain wire, screened with aluminised tape, with an overall PVC sheath. E.g., wire size 7/0.2mm (24 AWG).

The table shows some suitable manufacturers' references; other manufacture's equivalents can be used.

Table 1

| No. of Pairs | Gill ref. | Belden ref. | Batt electronics ref. | Cable Gauge |
|--------------|-----------|-------------|-----------------------|-------------|
| 2            | -         | 9729        | 91071                 | 24          |
| 3            | 026-02660 | 9730        | 91030                 | 24          |
| 4            | 026-03156 | 9728        | 91199                 | 24          |
| 6            | -         | 8778        | 91011                 | 22          |
| 9            | 026-02663 | 8774        | 91009                 | 22          |

#### Cable length

The typical maximum length at 9600 baud is 1km (3200ft), using the recommended cable. If any problems of data corruption are experienced (due to, for example, a high local electrical 'noise' level), then a lower baud rate should be used. Alternatively, a thicker or higher specification cable can be tried. If a heated unit is used on longer cables than supplied, consideration should be given to powering the heater using lower gauge wire or paralleling wires to reduce volt drops.

#### Cabling and junction box

If the WindObserver 70/75 unit is fitted with a flying 9 pair cable attached this must be terminated in a suitable terminal box to IP66 or better, fitted with glands to prevent moisture ingress.

The cable type from the terminal box to the host system must be as specified above. If any cable is to be exposed to mechanical damage, it must be enclosed in a suitable conduit or cable tray. The cable must be securely fixed with cable clamps or equivalent at regular intervals such that the WindObserver cable gland does not support the cable weight.

The gland area at the base of the WindObserver 70/75 **should not** be directly exposed to moisture, as whilst the gland is sealed when mated, the anemometer is vented to air at the base to avoid pressure build up. If an IP66 rating is essential or the unit is mounted other than 'right way up' **use the gasket** provided in the mounting kit and apply additional sealing compounds around the base.

### 4.6. Power supplies

#### All WindObserver 70/75 units

Sensor Supply: -

Voltage 9 to 30v DC

Current 50mA Average. 60mA max

- The WindObserver 70/75 has reverse polarity protection.

#### Wind Observer Units with Heating

Heater Supply: -

Voltage 24V  $\pm$  15% AC RMS or 24V DC  $\pm$  10%.

Current allow for 7A.



The AC Supply must be isolated from Mains Supply.

- The heating module requires a separate power supply.
- Heater Cable length should be minimised to avoid cable volt drops and ensure maximum voltage received at the Anemometer.
- All three heater pair cables must be used, connect yellow, brown and orange wires to heater positive and their respective black wires to heater negative.
- The heating (H command) is H2 as a default condition. If heating is not required enabled then the H command must be set for H1.

The WindObserver 70/75 has reverse polarity protection.

#### WARNING NOTE:-



When heating is activated the bullet and transducer arms will get very hot and should not be handled.

### 4.7. Mechanical Installation



Do NOT remove the black “rubber” transducer caps. Warranty is void if the Green security seal is damaged or removed.

Take care not to knock the four Transducer arms.

Before installing, a bench system test is recommended.

All the time the WindObserver 70/75 is not in its final location, it should be protected from damage by keeping it in the original packaging as long as possible, treating it as a delicate instrument.

When installing the unit handle with lint free gloves and degrease the unit to reduce the build-up of deposits.

Do not apply clamps to the WindObserver cylinder body as this will distort the cylinder and affect sealing.

#### Location

It is important to ensure that the WindObserver 70/75 is mounted in a position clear of any structure, which may obstruct the airflow or induce turbulence.

**Do NOT** mount the WindObserver 70/75 in close proximity of high-powered radar or radio transmitters. A site survey may be required if there is any doubt about the strength of external electrical noise. (See Section 5.3)

#### Orientation

Normally the WindObserver 70/75 is mounted vertically with the cable exit at the bottom.

Alternatively, the unit may be mounted in any orientation, but note that if the unit is mounted with the cable uppermost, the base **must** be fully sealed externally to prevent water penetration. Fit the supplied gasket if the 2 metal mounting faces are of dissimilar metals to prevent galvanic corrosion.

### WindObserver Sensor and Bracket Mounting

Mount the Sensor on to the Bracket so that the Sensor North Marker points to the bracket pole.


Secure the sensor to its mount using the three M5 screws and three M5 split wavy washers supplied in the mounting bracket kit box. Torque the three M5 bolts and washers to 4.5Nm.


The Bracket uses a mounting clamp suitable for attaching to a vertical pipe with a diameter of 30-58mm. When mounting the Bracket Sensor, consider the position, orientation and alignment of the unit. Mount at the top of a Pipe to ensure a clear unobstructed measurement view.

Note that the mounting pipe should first be degreased and when assembling the Bracket clamp assembly, the outer clamp nuts need to be tightened evenly to a torque figure of 3Nm.

The moving plate part of the clamp needs to be reversed for poles below 38mm diameter.

Screw an Earth cable minimum of 6mm<sup>2</sup> to the Bracket chassis using Screw and Terminal Tag fixings supplied.

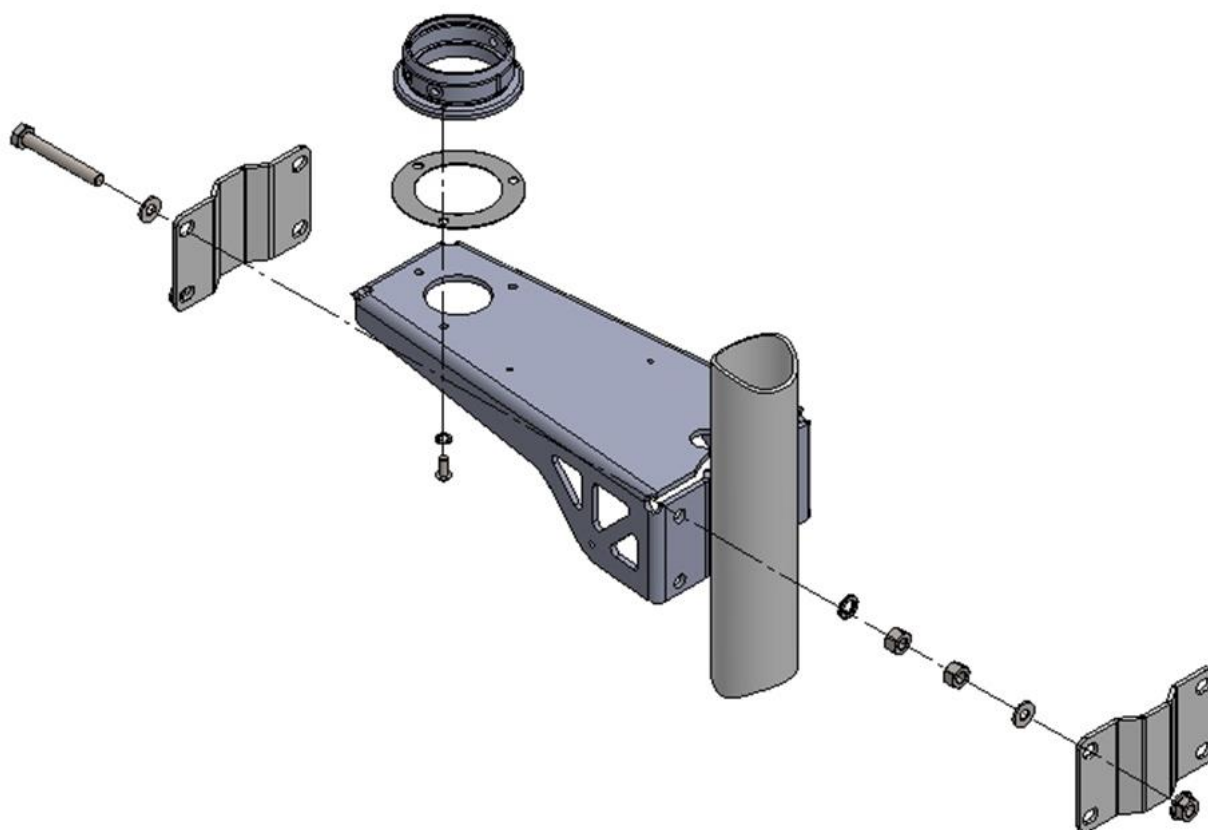

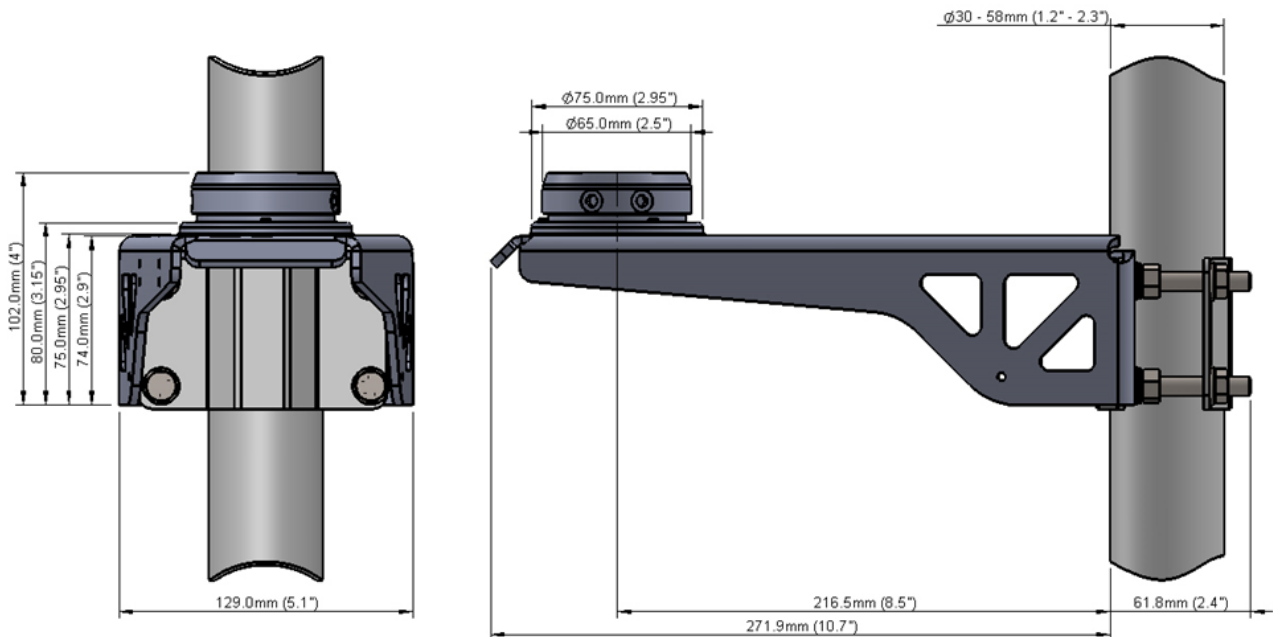

### Weight

1.29Kg (without Sensor fitted)

### Material

Anodised Aluminium Bracket with Stainless Steel Mount and fittings. An isolation gasket is fitted between the Stainless Steel mount and the Bracket to reduce corrosion.




### Mounting bracket (Short and Long Mounts)

A suggested mounting bracket using Short or Long Mounts is shown in Fig 1. P17

It is recommended that the WindObserver 70/75 mounting bracket be manufactured from stainless steel 316, to prevent possible galvanic corrosion.

It is also recommended that the supplied gasket be always fitted to ensure IP66 rating and to prevent galvanic corrosion if the mounting bracket is not manufactured from stainless steel 316.

Stainless steel 316 fixings must be used.

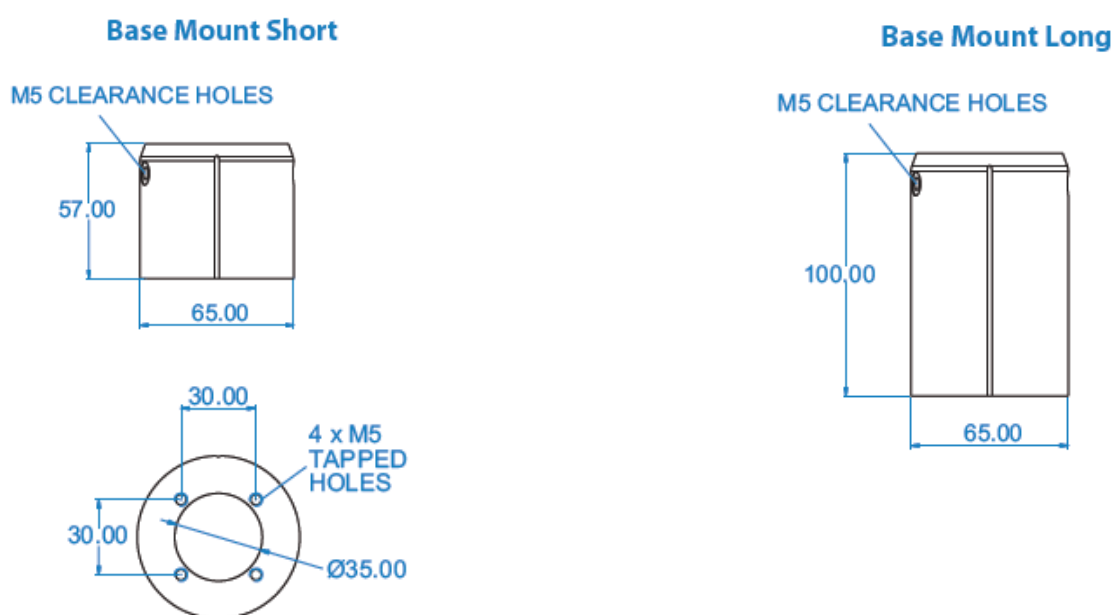

### Suggested mounting bracket and Earthing (grounding) arrangements


The example shows a long mount fitted to a cable gland unit, a similar Earthing/ mounting arrangement can be used with short mounts and connector based units.

A mounting kit (1390-10-164) is supplied with the WindObserver 70/75 to allow assembly of the mount to the base of the WindObserver.

**Included in the supplied mounting kit is an O Ring Seal which must be fitted inside of the Base Mount.**

Now fit the Base Mount to the WindObserver base using supplied 3 off M5x12 screws, first fit a wavy washer to them, then a flat washer, then the seal washer before screwing to the WindObserver Base mount.


Figure 1

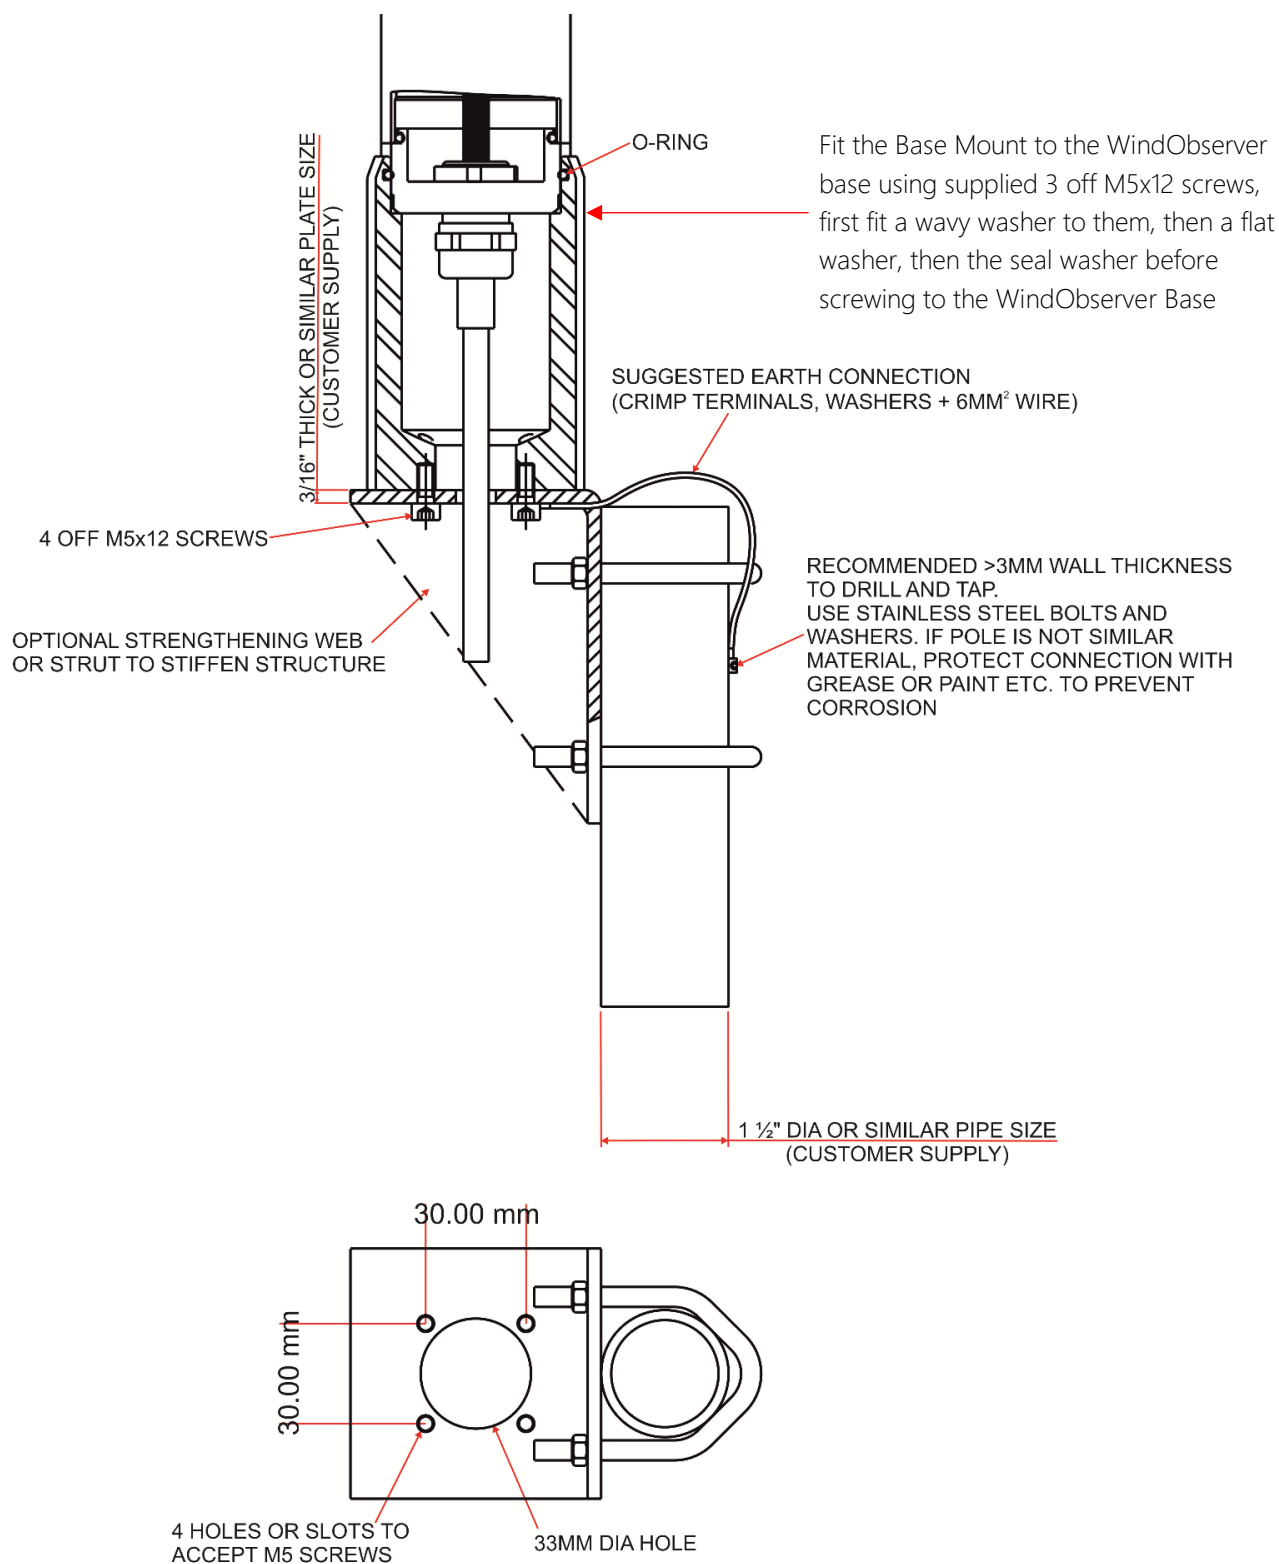

### Pipe mounting (use with Pipe Mount)

The Pipe Mount base for the WindObserver 70/75 has the following dimensions.

Included in the supplied mounting kit is an O Ring Seal which must be fitted inside of the Pipe Mount Base.

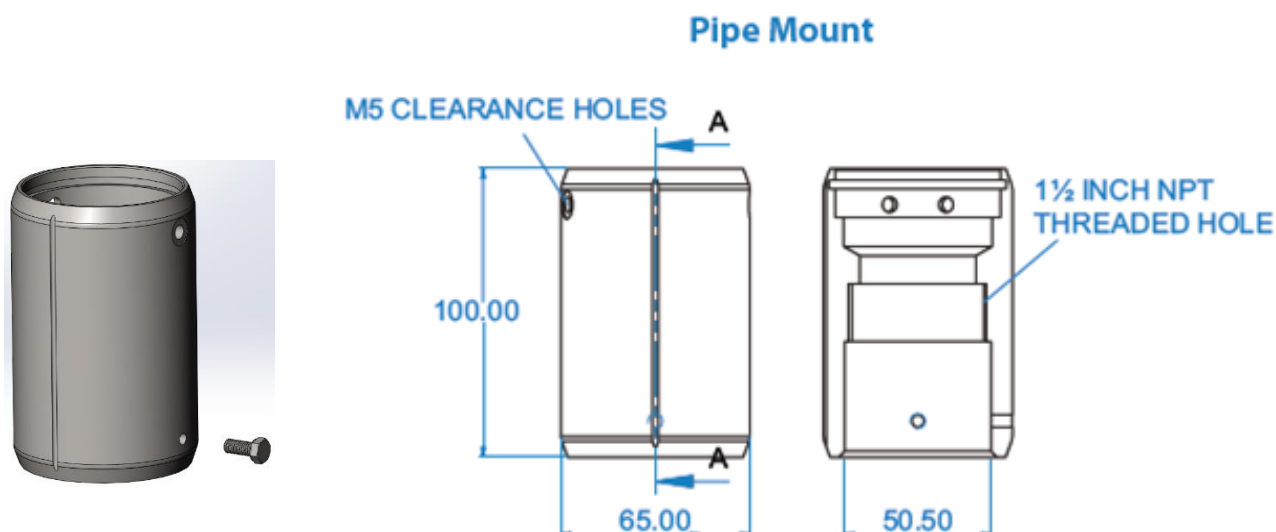

The mounting pole dimension should be 50mm (1.97") diameter.

Three M5 x 12 hex screws are provided to secure the Pipe Mount to the WindObserver base.

Three M5 x 12 hex screws to secure the Pipe Mount to the pipe through M5 tapped holes in the Pipe Mount.



If a screw threaded pole is used it should be a 1.5-inch National Pipe Thread (NPT) type.

It is recommended that the WindObserver mounting pole be manufactured from Stainless Steel 316, to prevent possible galvanic corrosion.

### Custom Mount (Use with WindObserver No Mount Option)


Although it is recommended that customers select a base mount option from Gill Instruments, should a customer wish to design their own mount then the WindObserver base dimension details for this are as follows:-

The WindObserver base has three M5 tapped holes, 8mm deep.

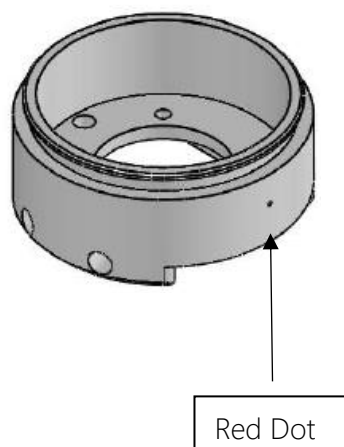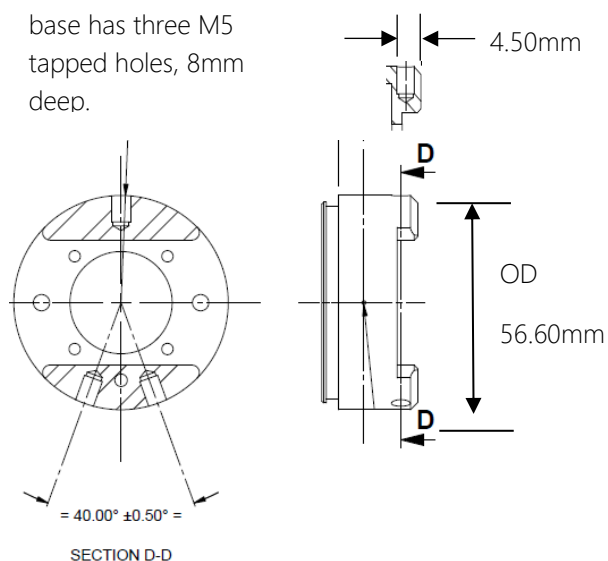

### Updated Cable Gland Base Assembly

All models that utilise the cable gland fitment will now have an updated base assembly which will allow for either a direct panel mount attachment (as per the WindObserver 2) or use of the panel/pipe mount adaptors (as per the WindObserver 65/70/75/90):

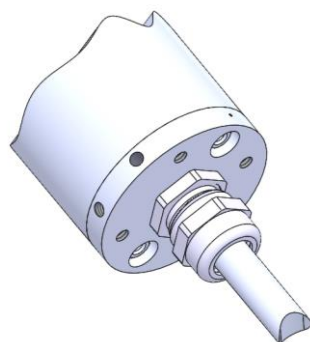

*Figure 2; updated base fitment for cable gland model variants*

### Alignment

The anemometer should be set to point North (or to another known reference direction), using the North Spar, which can be identified from the red dot on the base of the instrument or vertical groove on short base, long base or pipe mount adaptor.


*See page 21, figure 2a.*



Since all wind measurements are made relative to the North Spar, it is important to use only the North Spar for alignment and not the red dot located at the base of the unit (only visible without base mount) nor the vertical groove located on the base mount (only when fitted).

If the unit is used in a tunnel, (and the Tunnel format is used), the unit would normally be aligned with the N – S axis in the horizontal plane.


Figure 2a North Marker (Long Base Mount shown for illustrative purposes)

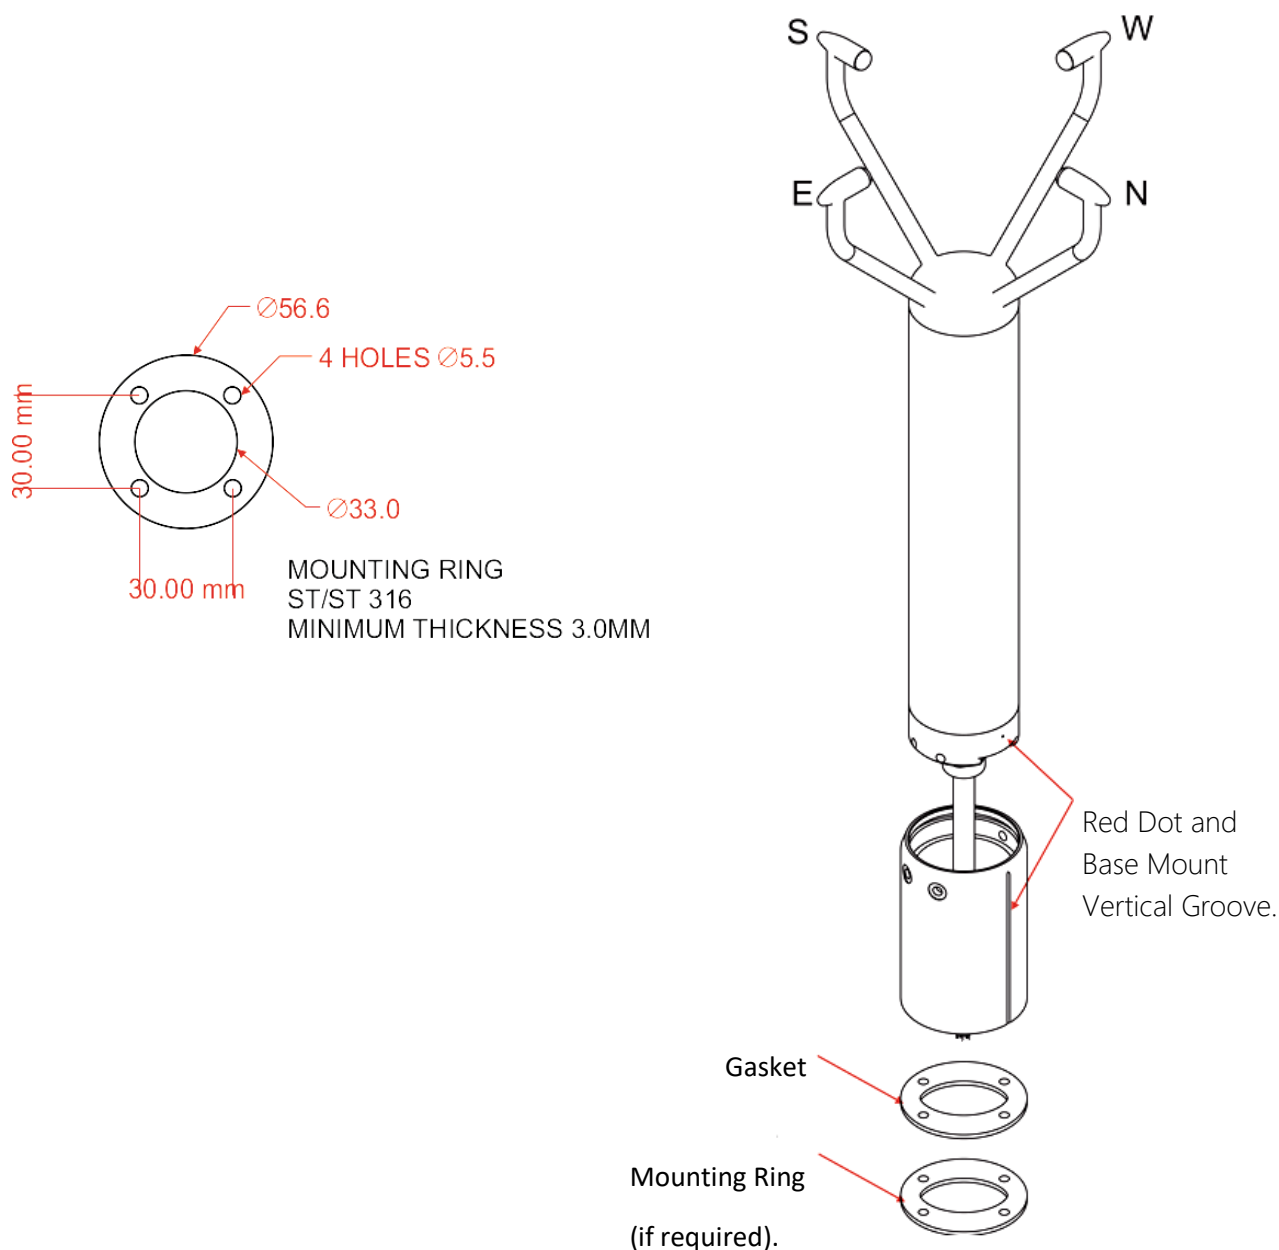


Pipe Mount units do not require the gasket and mounting ring.

Figure 2b WindObserver 70/75 outline dimensions


### Short Base Mount Unit Dimensions

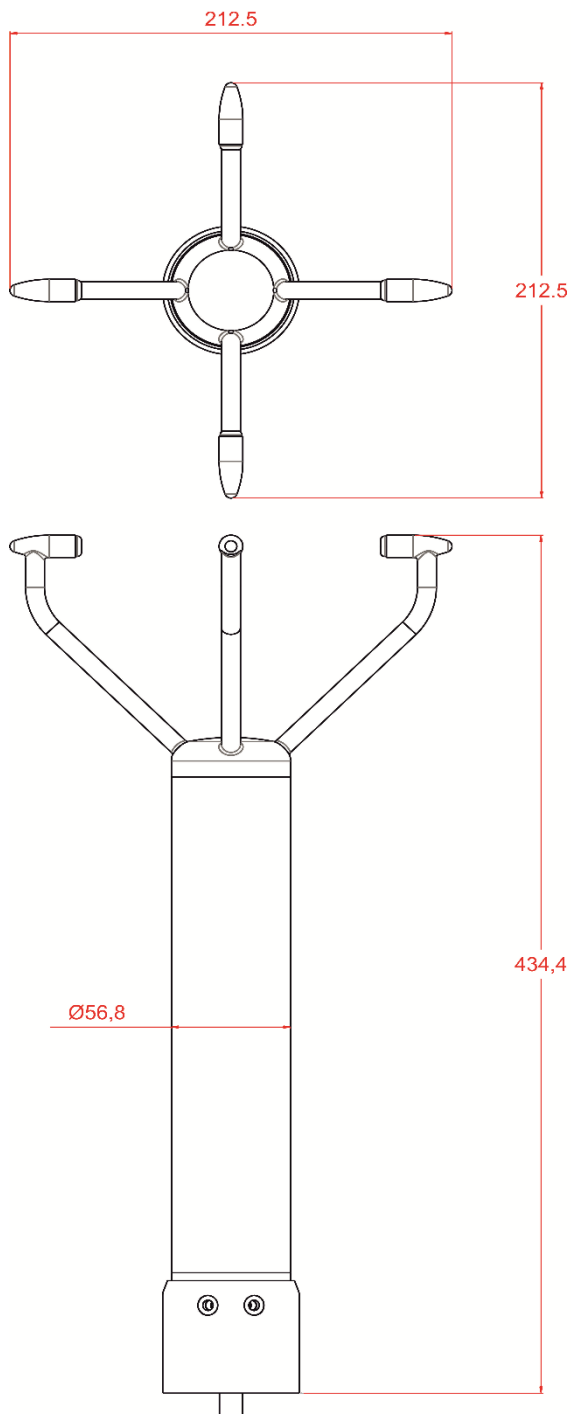

### Long Base Mount Unit Dimensions

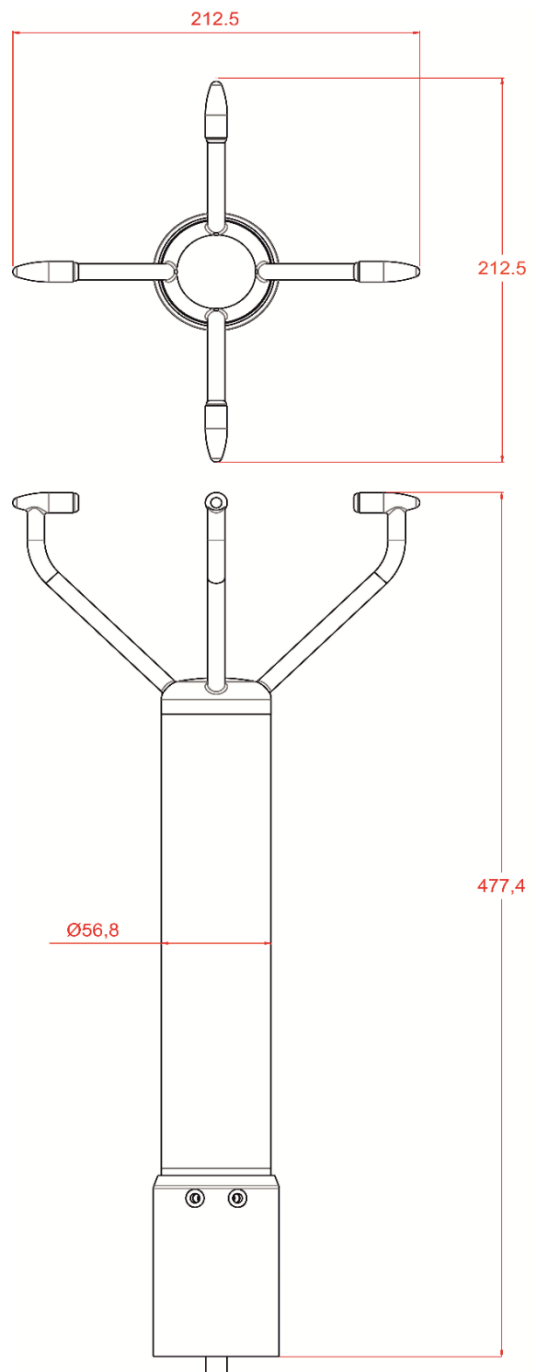

### Pipe Mount Unit Dimensions

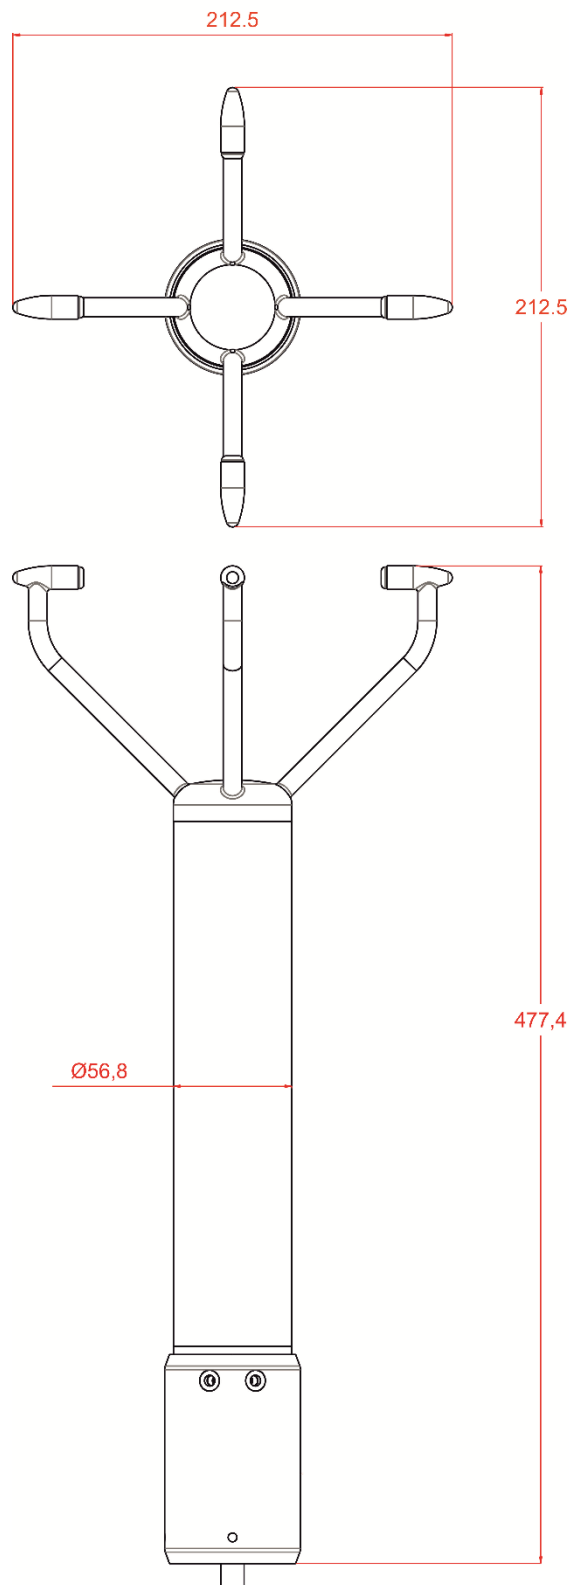



### 5. Message Formats & Options

On first applying power to the WindObserver 70/75, it will be in 'Measurement Mode', and it will output wind measurement information within 3 seconds in one of the formats as described below.

Setting the output format, units, other parameters, options and the communication settings are all carried out in the alternative 'Configuration Mode'.

*See Appendix F CONFIGURING for details of how this is done.*

The factory default settings are shown here in **bold**, and for convenience some 'Configuration codes' (as used to set the configuration) are shown in blue boxes.

For example M3.

#### 5.1. Wind Speed format

The wind speed measurements can be output in one of the following formats: UV, Polar, Customer formats (NMEA and Tunnel).

#### 5.2. Output format

The UV and Polar wind speed parameters are output in either ASCII or binary. These parameters can be transmitted continuously or polled from the user.

Polar is also available in continuous NMEA format.

#### Output Formats Table

| Output format | Output see Notes below | Configuration code |
|---------------|------------------------|--------------------|
| ASCII UV      | Continuous             | M1                 |
|               | Polled                 | M3                 |
| ASCII Polar   | Continuous             | M2                 |
|               | Polled                 | M4                 |
| NMEA          | Continuous             | M5                 |
| ASCII Polar   | Continuous Averaged    | M15                |
| ASCII Polar   | Polled Averaged        | M14                |



1. Continuous Output: In this mode the unit continuously outputs a burst of RS422 level data (the frequency determined by the output rate setting). After the burst of data and until the next data burst the data lines revert to a high impedance state.

2. Polled Output: In this mode the data lines are in a high impedance state until the unit is polled for data. Upon receipt of a poll command the unit outputs a burst of data at RS485 levels and then reverts to a high impedance state until the next poll command receipt.

### Low wind speeds

Whilst the wind speed is below 0.05 metres/sec, the wind direction will not be calculated, and the last known good direction figure is shown. All other output parameters will continue to update at the output rate

### 5.3. Units

The wind speed can be set to any of the following units:

| Unit                | Abbreviation |
|---------------------|--------------|
| Metres per sec      | m/s          |
| Knots               | knots        |
| Miles per hour      | MPH          |
| Kilometres per hour | kph          |
| Feet per minute     | fpm          |

### 5.4. Output rate

The output frequency can be set between 1 and 4 per second. The wind speed is sampled every 25ms, each axis being sampled sequentially. The following Table lists the possible outputs per second and the corresponding number of averaged samples. A 25ms sample period is used to process and output the results.

| Outputs per Second | Sample Average |
|--------------------|----------------|
| 1                  | 39             |
| 2                  | 19             |
| 4                  | 9              |

### 5.5. Averaging (Digital Data)

There are two digital averaging options: -

#### 5.5.1. G Command Averaging

Using the G Command in association with modes other than M14, M15 and polled modes.

The Averaging Period can be set from zero to 3600 secs. (1 hour). The default setting is zero. When averaging is enabled, data is output at a rate determined by the averaging period. The data is an average of valid data collected during the averaging period.

If G is set to zero, then averaging settings will be disabled.

For instance, if the unit is set for G0025 then every 25 seconds there will be a single result output that provides the average of the wind direction and magnitude data over the last 25 seconds.

A,219,000.78,M,60, 0D

A,202,000.79,M,60, 06

A,207,001.22,M,60, 0C

A,220,000.48,M,60, 04

#### 5.5.2. Road Weather Averaging (RWA)


##### Modes 14 and 15

The averaging is implemented with reference to the following standard:

- Guide to Meteorological Instruments and Methods of Observation – World Meteorological Organization  
WMO-No8 seventh edition 2008 ISBN 978-92-63-10008-5

The direction and magnitude outputs are derived from the vector sum of U and V over the RWALONG averaging period (default 10 minutes in P1).

The gust output is derived from the vector sum of U and V over 3 readings (3 seconds in P1), and the max gust is the maximum of the gust value over the RWASHORT period (default 60 seconds in P1). The max gust value is reset to zero at the end of each RWASHORT period.

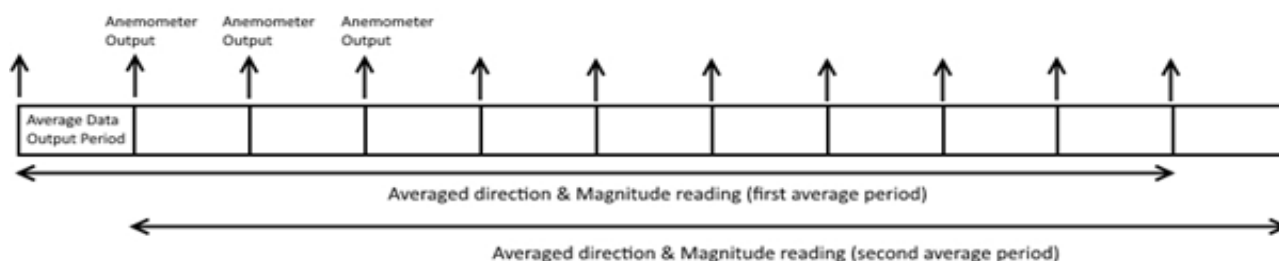

RWA Default settings are: -

P (Output rate Hz) = 1

RWASHORT = 60

RWALONG = 10

Therefore:

**Anemometer output period** =  $60/1 = 60$  seconds (the WindObserver will output a reading every 60 seconds).

**Averaged direction and magnitude reading** =  $10 \times 60 = 600$  seconds

(This is the time the readings will be averaged over).

When the average building period has been completed, the average reported thereafter will be a rolling average derived from the last averaged direction and magnitude time period.

### Mode 15 – Averaging Data in Continuous mode.

Averaged Digital Data Output comprises of.

<Start of String> , Unit Identifier, Mode, Averaged Direction, Averaged Magnitude, units, Maximum Gust Direction, Maximum Gust Magnitude, Status, , checksum.

e.g.

**0A,M15,293,000.03,M,338,000.05,51,♥47**

(status code 51 shows measurement average building, non-heat enabled units only).

**0A,M15,198,000.04,M,088,000.39,00,♥4B**

(status code 00 code shows measurement average building period complete and normal operation, non-heat enabled units only).

Principle set up commands associated with this averaging mode are: -

Px:- Measurement Rate, (P1) this command sets the underlying measurement rate 1Hz.

RWASHORT xx: - Short Term Number, where xx is a number from 10 to 60.

RWALONG xx: - Long Term Number, where xx is a number from 1 to 10.

Therefore, with the RWASHORT number set for 60 (default) and P command set for 1Hz (P1 default) the unit will output a rolling averaged reading every 60 seconds.

The Averaged Data Output period in seconds is: -

#### RWASHORT Number

Measurement Rate (P Setting Hz value)

Therefore, with the RWASHORT number set for 60 (default) and P command set for 1Hz (P1 default) the unit will output a rolling averaged reading every 60 seconds.

The Averaged Direction and Magnitude reading is based on: - RWALONG Number \* Averaged Data Output period.

```
0A,M15,293,000.03,M,338,000.05,51,♥47
0A,M15,301,000.03,M,304,000.04,51,♥43
0A,M15,299,000.03,M,285,000.02,51,♥40
0A,M15,303,000.02,M,336,000.02,51,♥47
0A,M15,291,000.03,M,200,000.64,51,♥48
0A,M15,291,000.02,M,301,000.03,51,♥48
0A,M15,243,000.04,M,172,001.52,51,♥42
0A,M15,236,000.03,M,090,000.08,51,♥44
0A,M15,243,000.03,M,099,000.09,51,♥4E
0A,M15,198,000.04,M,088,000.39,00,♥4B
0A,M15,180,000.04,M,099,000.09,00,♥41
0A,M15,180,000.03,M,345,000.03,00,♥4E
```

The Maximum Gust Direction is the direction of the maximum gust measured over the short term output period. Gust is generated from a rolling 3s average of the short term output period, and reset at the end of short term output period.

The maximum Gust Magnitude is the magnitude of the maximum gust measured over the short term output period. Gust is generated from a rolling 3s average of the short-term output period and reset at the end of short-term output period.

### Notes: -

Non Heat Enabled Units - Whenever the unit is powered up then until the unit has reached its minimum long term averaging interval the status code will read 51 (Measurement Average Building).

Heat Enabled Units - On units where heat is enabled Code 51 will not be output during the measurement average building period, therefore allow for this period on power up before taking readings to be fully averaged (maximum period of 10 minutes).

The G Command setting has no effect on Mode 14 and Mode 15 Settings.

### Mode 14 – Averaging Polled Mode

See Mode 15 for data output format and command explanations.

For ease of use before changing to this Mode set all other WindObserver parameters first including: -

Px:- Measurement Rate, (P1) this command sets the underlying measurement rate of 1Hz.

RWASHORT xx: - Short Term Number, where xx is a number from 10 to 60.

RWALONG xx: - Long Term Number, where xx is a number from 1 to 10.

Once set for Mode 14, to Poll for averaged data use the ? command followed by the unit designator A (default setting, ensure capital letter used).

The polled mode commands available in this mode are:

| Description                          | Command | WindObserver response     |
|--------------------------------------|---------|---------------------------|
| Enable Polled Mode                   | ?       | (None)                    |
| WindObserver Unit Identifier (N)     | A.....Z | Output generated          |
| Disable Polled mode                  | !       | (None)                    |
| Request WindObserver Unit Identifier | &       | A ..... Z (as configured) |
| Enter Configuration mode             | *<N>    | CONFIGURATION MODE        |

Where <N> is the unit identifier, if used in a multi-drop system then it is recommended that ID's A to F and KMNP are not used as these characters can be present in the data string.

It is suggested that in polled mode the following sequence is used for every poll for information.

? Ensures that the Sensor is enabled to cover the event that a power down has occurred.

A-Z Appropriate unit designator (capitol letter) sent to retrieve a line of data.

! Sent to disable poll mode and reduce possibility of erroneous poll generation.

When polled with the default Mode 14 factory setting the WindObserver (set for default 1Hz output) will output the last valid 10-minute wind speed and direction average, updated every minute along with last valid 1 minute Gust magnitude.



### Non Heat Enabled Units.

If the unit is powered up and polled before the unit has reached its minimum averaging interval the status code will read 51 (Measurement Average Building, non-heat enabled units only).

### Heat Enabled Units.

On units where heat is enabled Code 51 will not be output if polled during the measurement average building period, therefore allow for this period on power up before taking readings to be fully averaged (maximum period of 10 minutes).

```
0A,M15,293,000.03,M,338,000.05,51,♥47
0A,M15,301,000.03,M,304,000.04,51,♥43
0A,M15,299,000.03,M,285,000.02,51,♥4D
0A,M15,303,000.02,M,336,000.02,51,♥47
0A,M15,291,000.03,M,200,000.64,51,♥48
0A,M15,291,000.02,M,301,000.03,51,♥48
0A,M15,243,000.04,M,172,001.52,51,♥42
0A,M15,236,000.03,M,090,000.08,51,♥44
0A,M15,243,000.03,M,099,000.09,51,♥4E
0A,M15,198,000.04,M,088,000.39,00,♥4B
0A,M15,180,000.04,M,099,000.09,00,♥41
0A,M15,180,000.03,M,345,000.03,00,♥4E
```

### 5.6. Options

#### Heating (If fitted)

Heating is autonomous and requires no set-up once activated.

Upon unit switch on if heating is enabled and heater power available then a 1-minute burst of heating will occur to give confidence that the heating is functioning.

**WARNING NOTE:** -



When heating is activated the bullet and transducer arms will get very hot and should not be handled.

#### 45° Offset


If required, the U axis can be offset +45° to the transducer axis.

#### Vertical Output Padding

A dummy W vector is inserted to provide compatibility with any WindMaster that may be in a network.

### 5.7. ASCII message format (UV, and Polar)

#### ASCII UV format

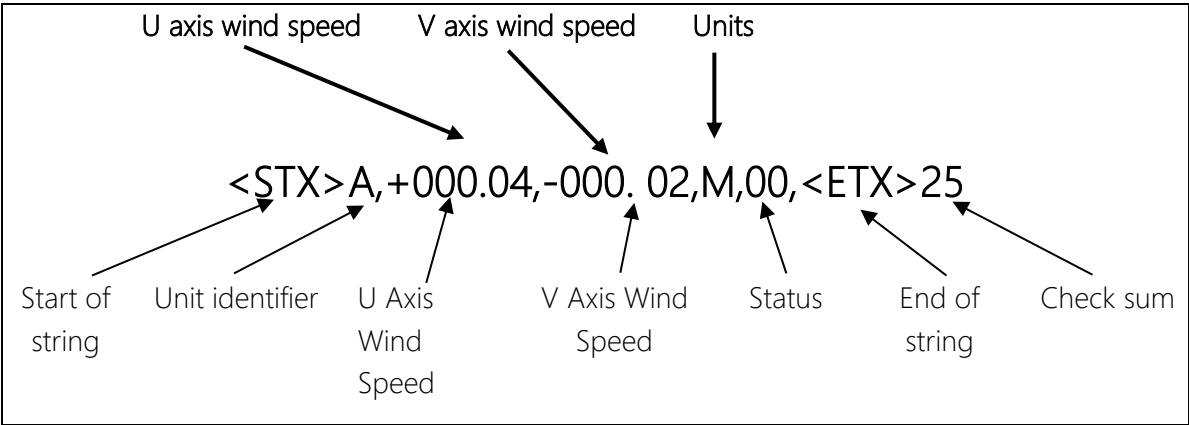


Where

|                   |                                                                                                 |                                                       |
|-------------------|-------------------------------------------------------------------------------------------------|-------------------------------------------------------|
| U axis wind speed | In increments of 0.01 units ( $\pm$ UUU.UU)                                                     |                                                       |
| V axis wind speed | In increments of 0.01 units ( $\pm$ VVV.VV)                                                     |                                                       |
| Units             | <b>Value</b>                                                                                    | <b>Units</b>                                          |
|                   | M                                                                                               | Metres per second (m/s)                               |
|                   | N                                                                                               | Knots (knots)                                         |
|                   | P                                                                                               | Miles per hour (MPH)                                  |
|                   | K                                                                                               | Kilometres per hour (kph)                             |
|                   | F                                                                                               | Feet per minute (fpm)                                 |
| Start of string   | ASCII value 2                                                                                   |                                                       |
| Unit identifier   | Letter A – Z (default A)                                                                        |                                                       |
| Status            | <b>Value</b>                                                                                    | <b>Status</b>                                         |
|                   | 0                                                                                               | OK                                                    |
|                   | 60                                                                                              | Heating enabled and OK if enabled                     |
|                   | Any other value                                                                                 | Warning or fault condition<br>- see <i>Appendix K</i> |
| End of string     | ASCII value 3                                                                                   |                                                       |
| Check sum         | Exclusive OR of all characters between Start of String and End of String reported as ASCII hex. |                                                       |



### ASCII Polar format

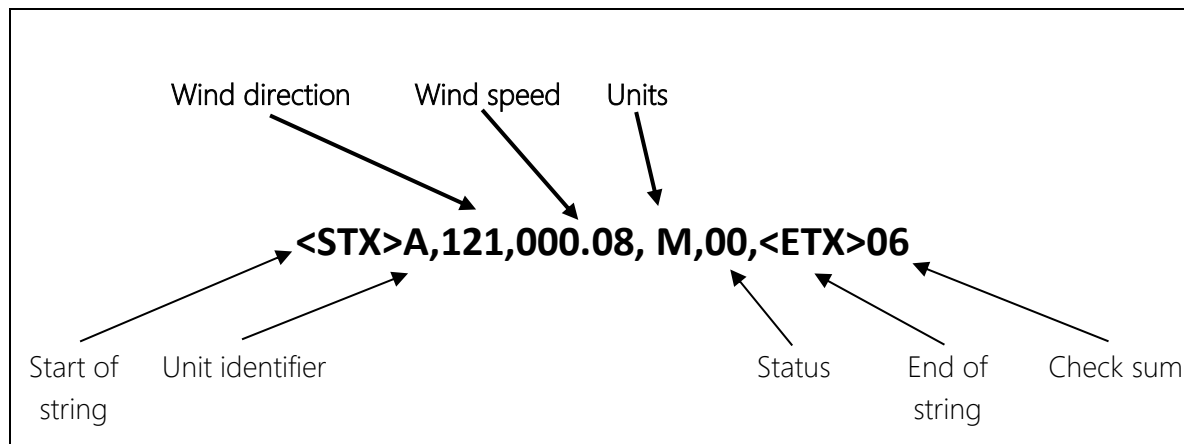

Where

|                      |                                             |
|----------------------|---------------------------------------------|
| Wind direction       | In degrees relative to N (DDD)              |
| Wind speed           | In increments of 0.01 units ( $\pm$ MMM.MM) |
| All other parameters | See Section 5.7 <i>ASCII UV format</i>      |

### ASCII Polled (UV and Polar)

When in the Polled mode, an output is only generated when the host system sends a Poll signal to the WindObserver consisting of the WindObserver Unit Identifier – that is, the relevant letter A – Z.

The output formats are otherwise as described above.

The commands available in this mode are:

| Description                          | Command   | WindObserver response       |
|--------------------------------------|-----------|-----------------------------|
| WindObserver Unit Identifier         | A ..... Z | Wind speed output generated |
| Enable Polled mode                   | ?         | (None)                      |
| Disable Polled mode                  | !         | (None)                      |
| Request WindObserver Unit Identifier | &         | A ..... Z (as configured)   |
| Enter Configuration mode             | *<N>      | CONFIGURATION MODE          |

Where <N> is the unit identifier, if used in a multi-drop system then it is recommended that ID's A to F and KMNP are not used as these characters can be present in the data string.

It is suggested that in polled mode the following sequence is used for every poll for information.

? Ensures that the Sensor is enabled to cover the event that a power down has occurred.


A-Z Appropriate unit designator sent to retrieve a line of data.

! Sent to disable poll mode and reduce possibility of erroneous poll generation.

When in polled mode the system will respond to the data command within 30mS with the last valid data sample as calculated by the Output rate (P Mode Setting).

If the unit is powered down after use or upon switch on then allow 3 seconds from switch on before sending poll commands.

### 5.8. NMEA Format

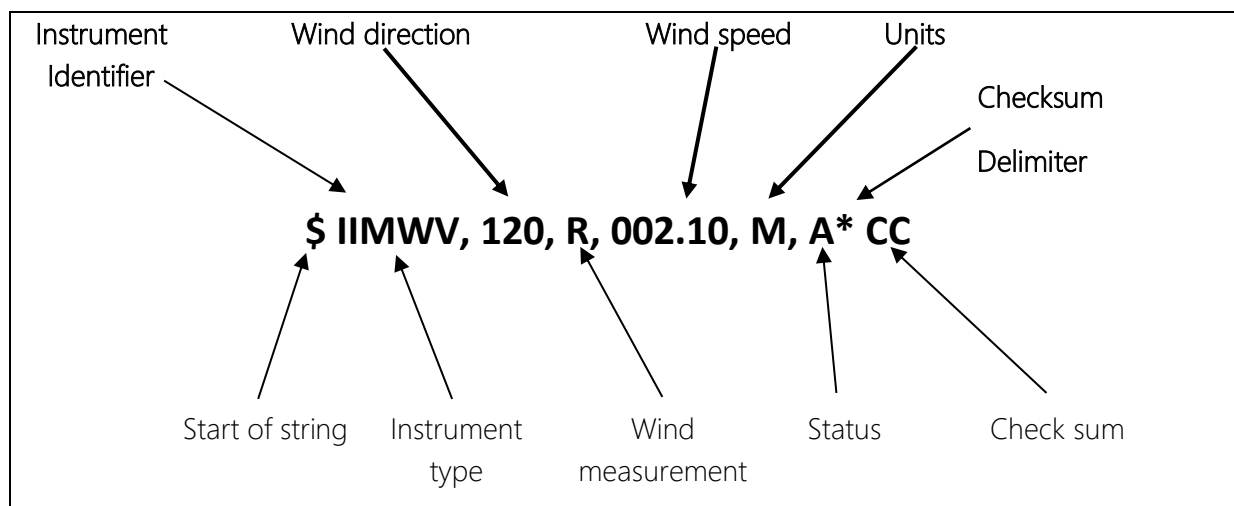

Where

|                         |                                                                            |                           |
|-------------------------|----------------------------------------------------------------------------|---------------------------|
| <b>Wind direction</b>   | In degrees relative to North (DDD)                                         |                           |
| <b>Wind speed</b>       | In increments of 0.01 units (±MMM.MM)                                      |                           |
| <b>Units</b>            | M                                                                          | Metres per second (m/s)   |
|                         | N                                                                          | Knots (knots)             |
|                         | P                                                                          | Miles per hour (MPH)      |
|                         | K                                                                          | Kilometres per hour (kph) |
|                         | F                                                                          | Feet per minute (fpm)     |
| <b>Start of string</b>  | \$                                                                         |                           |
| <b>Instrument type</b>  | IIMWV                                                                      |                           |
| <b>Wind measurement</b> | R                                                                          | Relative wind measurement |
| <b>Status</b>           | A                                                                          | Acceptable measurement    |
|                         | V                                                                          | Void measurement          |
| <b>Check sum</b>        | Exclusive OR of all characters between '\$' and '*' reported as ASCII hex. |                           |


A typical WindObserver 70/75 configuration suitable for NMEA would be:

B2, E1, F1, G0, K1, L1, M5, O1, P1, U1.

Consult specification NMEA 0183 version 3 (available on the web) [www.nmea.org](http://www.nmea.org) for complete interface details.

### 5.9. Averaging Format (Modes 14 and 15)

See also Para 5.5.2.

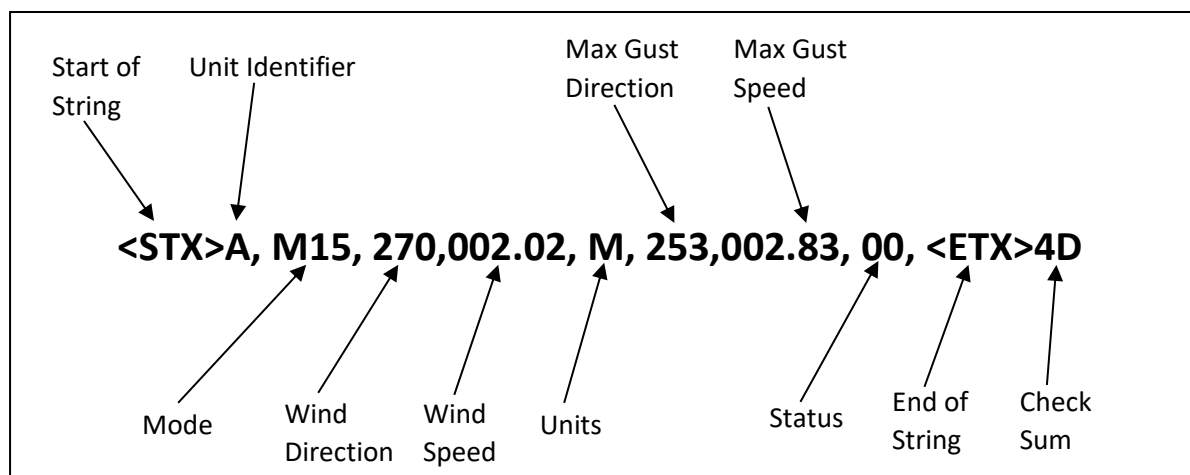

|                    |                                                                                                 |                                                                        |
|--------------------|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| Start of string    | ASCII value 2                                                                                   |                                                                        |
| Unit identifier    | Letter A – Z (default A)                                                                        |                                                                        |
| Mode               | M14                                                                                             | Polled Averaging                                                       |
|                    | M15                                                                                             | Continuous Output Averaging                                            |
| Wind Direction     | In degrees relative to North (DDD) settable average of direction in degrees.                    |                                                                        |
| Wind Speed         | In increments of 0.01 units ( $\pm$ MMM.MM), settable average of speed in m/s.                  |                                                                        |
| Units              | M                                                                                               | Metres per Second                                                      |
|                    | N                                                                                               | Knots                                                                  |
|                    | P                                                                                               | Miles per Hour                                                         |
|                    | K                                                                                               | Kilometres per Hour                                                    |
|                    | F                                                                                               | Feet per Minute                                                        |
| Max Direction Gust | In degrees relative to North (DDD)                                                              |                                                                        |
| Max Gust Speed     | In increments of 0.01 units ( $\pm$ MMM.MM)                                                     |                                                                        |
| Status             | <b>Value</b>                                                                                    | <b>Status</b>                                                          |
|                    | 00                                                                                              | OK                                                                     |
|                    | 60                                                                                              | Heating enabled and OK if enabled                                      |
|                    | 51                                                                                              | Means that the averaging is incomplete (non- heat enabled units only). |
|                    | Any other value                                                                                 | Warning or fault condition<br>- see Section Appendix K                 |
| End of string      | ASCII value 3                                                                                   |                                                                        |
| Check sum          | Exclusive OR of all characters between Start of String and End of String reported as ASCII hex. |                                                                        |

### Appendix A - Technical Specification

| Wind Measurement                                       |                                                                               |
|--------------------------------------------------------|-------------------------------------------------------------------------------|
| Parameters                                             | UV, Polar, NMEA                                                               |
| Output                                                 | 1,2,4, Hz                                                                     |
| Averaging                                              | Flexible 1-3600 seconds or Adjustable Averaging for Road Weather applications |
| Wind Speed                                             |                                                                               |
| <b>* Values are dependent on anemometer being used</b> |                                                                               |
| Range                                                  | 0 - 70m/s (Windobserver 70) or 0-75m/s (Windobserver 75)                      |
| Accuracy                                               | <2% RMSE @ 12m/s                                                              |
| Resolution                                             | 0.01m/s                                                                       |
| Offset                                                 | ±0.01m/s                                                                      |
| Units of Measurement                                   | m/s, Knots, MPH, KPH ft/min                                                   |
| Wind Direction                                         |                                                                               |
| Range                                                  | 0-359 Degrees                                                                 |
| Accuracy                                               | <2° RMSE @ 12m/s                                                              |
| Resolution                                             | 1°                                                                            |

|                          |                                      |
|--------------------------|--------------------------------------|
| Anemometer Status        | Supplied as part of standard message |
| Starting Threshold       | 0.01 m/s                             |
| Dead Band Wind Direction | None                                 |

| Power Requirement         |                                               |
|---------------------------|-----------------------------------------------|
| Input Voltage             | 9-30V DC 50mA @ 12V DC                        |
| Reverse voltage protected | YES                                           |
| Heating - Optional        | Allow 7A @ 24v AC rms ± 15%, or 24v DC ± 10%. |

| Digital Output |                                                               |
|----------------|---------------------------------------------------------------|
| Communication  | RS422, full duplex, network facility                          |
| Baud rates     | 1200, 2400, 4800, 9600, 19200, 38400                          |
| Formats        | 8 data bits, odd, even or no parity, 1 stop bit<br>Modbus RTU |

| Weight & Dimensions       |                                  |
|---------------------------|----------------------------------|
| Size                      | See manual Fig 2b for dimensions |
| WindObserver 70/75 Weight | 1.34kg (no mount or lead)        |
| Base Mount Short          | 0.63kg                           |
| Base Mount Long           | 1.05kg                           |
| Pipe Mount                | 1.06kg                           |

| Materials             |                     |
|-----------------------|---------------------|
| External Construction | Stainless Steel 316 |

| Environmental         |                                                          |
|-----------------------|----------------------------------------------------------|
| Moisture protection   | IP66 (NEMA4X)                                            |
| Operating temperature | -55°C to +70°C (heated version)                          |
| Humidity              | 0% to 100% RH                                            |
| Precipitation         | 300mm/hr Mil Std 810f Method 506.4                       |
| EMC                   | EN 61326-1<br>EN 60945<br>FCC CFR47 Parts 15.109 Class A |
| Icing                 | MILSTD810F Method 521.1 Procedure 1                      |

| Standards                                                           |
|---------------------------------------------------------------------|
| Traceable to UK national standards<br>Lloyds Register Type Approved |

| Site Calibration                     |
|--------------------------------------|
| None required. (See Appendix L p.68) |

### Appendix B - Connector and Cable Assembly

The WindObserver 70/75 variant with a connector base is supplied with a mating 19-way connector.

Open the pack of connector parts supplied (**Gill Part 1390-10-163**).

A set of assembly instructions are supplied with the connector together with: -.

| Table of Equivalent Part Numbers                       |               |                         |
|--------------------------------------------------------|---------------|-------------------------|
| Part Name                                              | Gill Part No. | Cannon Trident Part No. |
| Connector head, 19 way                                 | 020-04464     | 192993-0054             |
| Metal backshell (7 pieces)                             | 020-04465     | 192993-0084             |
| Solder bucket contacts<br>(5 per pack, (4 -off packs)) | 020-04469     | 192900-0635             |

#### Arrange Backshell (Gill Part Number 020-04465)

Pass parts 1-6 along the cable as per the diagram below.

(Note that the connector supplies the correct strain relief for cables with an outside diameter of 7.9 to 12.6mm).



#### Prepare Cable (e.g., Gill Part 026-02663).


Trim back the cable outer and twisted pair screen sleeves 40mm (see diagram below).

Trim back the screen drain wires to a length of 24mm.

Strip back the connection wires by 7.1mm and tin solder.


Solder the wires to the bucket contacts (will take 14awg to 26awg wire).

Unused wires should be cut back and insulated.

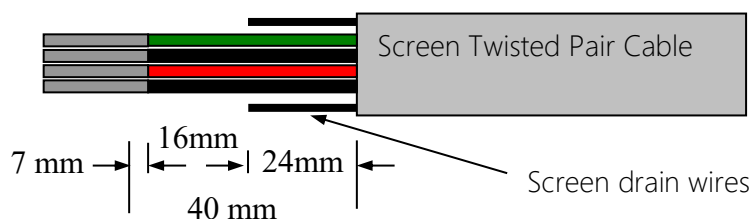

### Prepare Connector Head (Gill Part 020-04464).

Remove the connector thread protector and place the O-ring (part 7) into the groove of the connector head (020-04464).

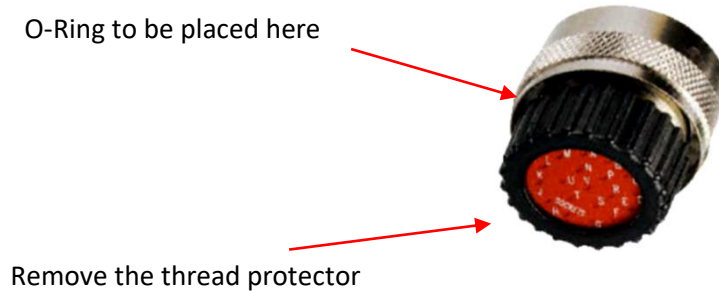



### Assemble Connector to the Cable

Referring to Page 39 and Page 41 push connector contacts through the red connector head seal into the appropriate location, when in place there should be a click as the contact locks into position.

Once contacts are in position pass part 6 up the cable and into position as shown below.


**Note:** if a connector pin need removing use Cannon Extraction Tool, Manufacturer's Part 192922-1450.

1. Fold and spread screen wires over part 6 and then push up part 5 as shown to clamp screen wires between Parts 5 and 6.


2.



3. Now screw in part 4 and torque up to a value of 10Nm.

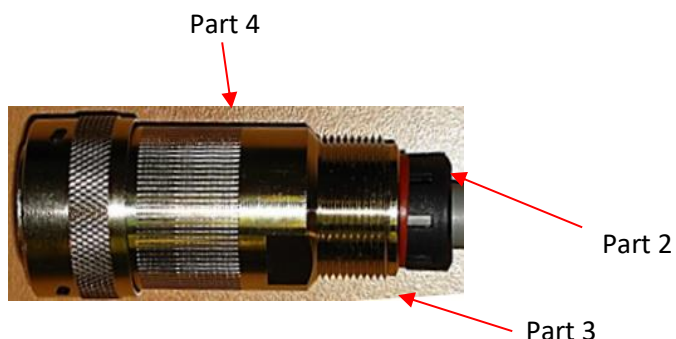

4. Pass parts 3 and 2, the cable seal and cable grip from the connector kit, along the cable to the housing.
5. Now screw in item 1, the clamp nut, over parts 2 and 3 and onto the housing and torque up to a value of 10Nm.

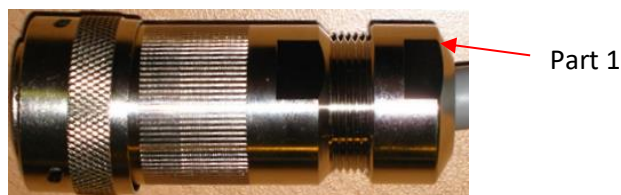

### Appendix C - Connections and default setup



#### Connections

Important any cable wires not used should be isolated and grounded at the terminating equipment/user end.

Do NOT connect the unit's 0V, heating -ve, or digital 0V to the screen or earth.

*On units with integral cable the screens of each pair are joined together inside the anemometer - these should be joined to the cable screen(s) of any further cable run. Avoid long grounding loops. Digital 0V should be used in conjunction with RS422 TX RX lines in order to improve noise immunity.*

#### Earthing or grounding

To ensure correct operation, and for maximum protection against lightning, the anemometer **MUST** be correctly earthed (grounded) via its mountings. Inadequate Earthing will degrade anemometer performance, particularly in the presence of radio frequency interference.

*See page 17, Fig 1 Suggested mounting bracket and Earthing (grounding) arrangements*

The unit **MUST** be connected to an appropriate grounding point with a minimum of 6mm<sup>2</sup> copper wire, via the M5 base screws. The cable screens must be joined with any cable screen continuing from the unit's cable via a junction box. The primary earth for the anemometer must be provided via the base screws and not via the cable screens.

View of the WindObserver 70/75 base connector variant

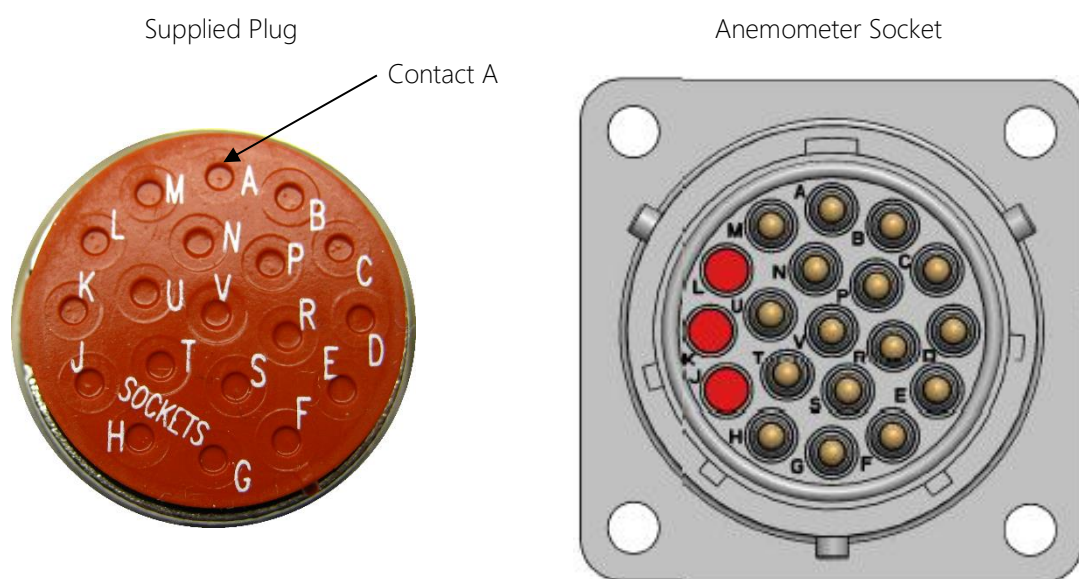


Table 2 - 19-way connector and cable connections

| 19 Way Connector<br>Terminal Letter | Cable Gland Option |                | Signal Designation |
|-------------------------------------|--------------------|----------------|--------------------|
|                                     | Conductor          | Colour         |                    |
| P                                   | Pair 1             | Green          | RS422 TXB (+)      |
| C                                   | Pair 1             | Black          | RS422 TXA (-)      |
| U                                   | Pair 2             | White          | RS422 RXB (+)      |
| V                                   | Pair 2             | Black          | RS422 (RXA (-)     |
| R                                   | Pair 3             | Red            | Supply V+          |
| D                                   | Pair 3             | Black          | Supply V -         |
| M                                   | Pair 4             | Blue           | Digital 0v         |
| N                                   | Pair 4             | Black          | Not Used (Isolate) |
| A                                   | Pair 5             | Yellow         | Heater +           |
| B                                   | Pair 5             | Black          | Heater -           |
| H                                   | Pair 6             | Brown          | Heater +           |
| G                                   | Pair 6             | Black          | Heater -           |
| E                                   | Pair 7             | Orange         | Not Used (Isolate) |
| F                                   | Pair 7             | Black          | Not Used (Isolate) |
| T No Connection                     | Pair 8             | White          | Not Used (Isolate) |
| S No Connection                     | Pair 8             | Red            | Not Used (Isolate) |
| L No Connection                     | Pair 9             | Green          | Not Used (Isolate) |
| K No Connection                     | Pair 9             | Red            | Not Used (Isolate) |
| J No Connection                     | Not Applicable     | Not Applicable | Not Used           |

### WindObserver 70/75 Default Set-up

#### Default Settings

The factory default settings are:

#### Non - heated units

|                                                             |
|-------------------------------------------------------------|
| A0 B3 C1 E1 F1 G0000 J1 K1 L1 M2 NA O1 P1 T1 U1 V1 X1 Y1 Z1 |
|-------------------------------------------------------------|

Plus RWASHORT 10 and RWALONG 60.

#### Heated units

|                                                                |
|----------------------------------------------------------------|
| A0 B3 C1 E1 F1 G0000 H2 J1 K1 L1 M2 NA O1 P1 T1 U1 V1 X1 Y1 Z1 |
|----------------------------------------------------------------|

Plus RWASHORT 10 and RWALONG 60.




That Heating (H command) is enabled as a default condition. If heating is not required enabled then the H command must be set for H1.

*See Section Appendix F Configuring for further details*

### Connecting to a PC with a RS422 or RS485 input

The PC requires either an internal RS422 interface card, or an external RS422/485 to RS232 or USB converter, which will plug into the PC or host equipment.

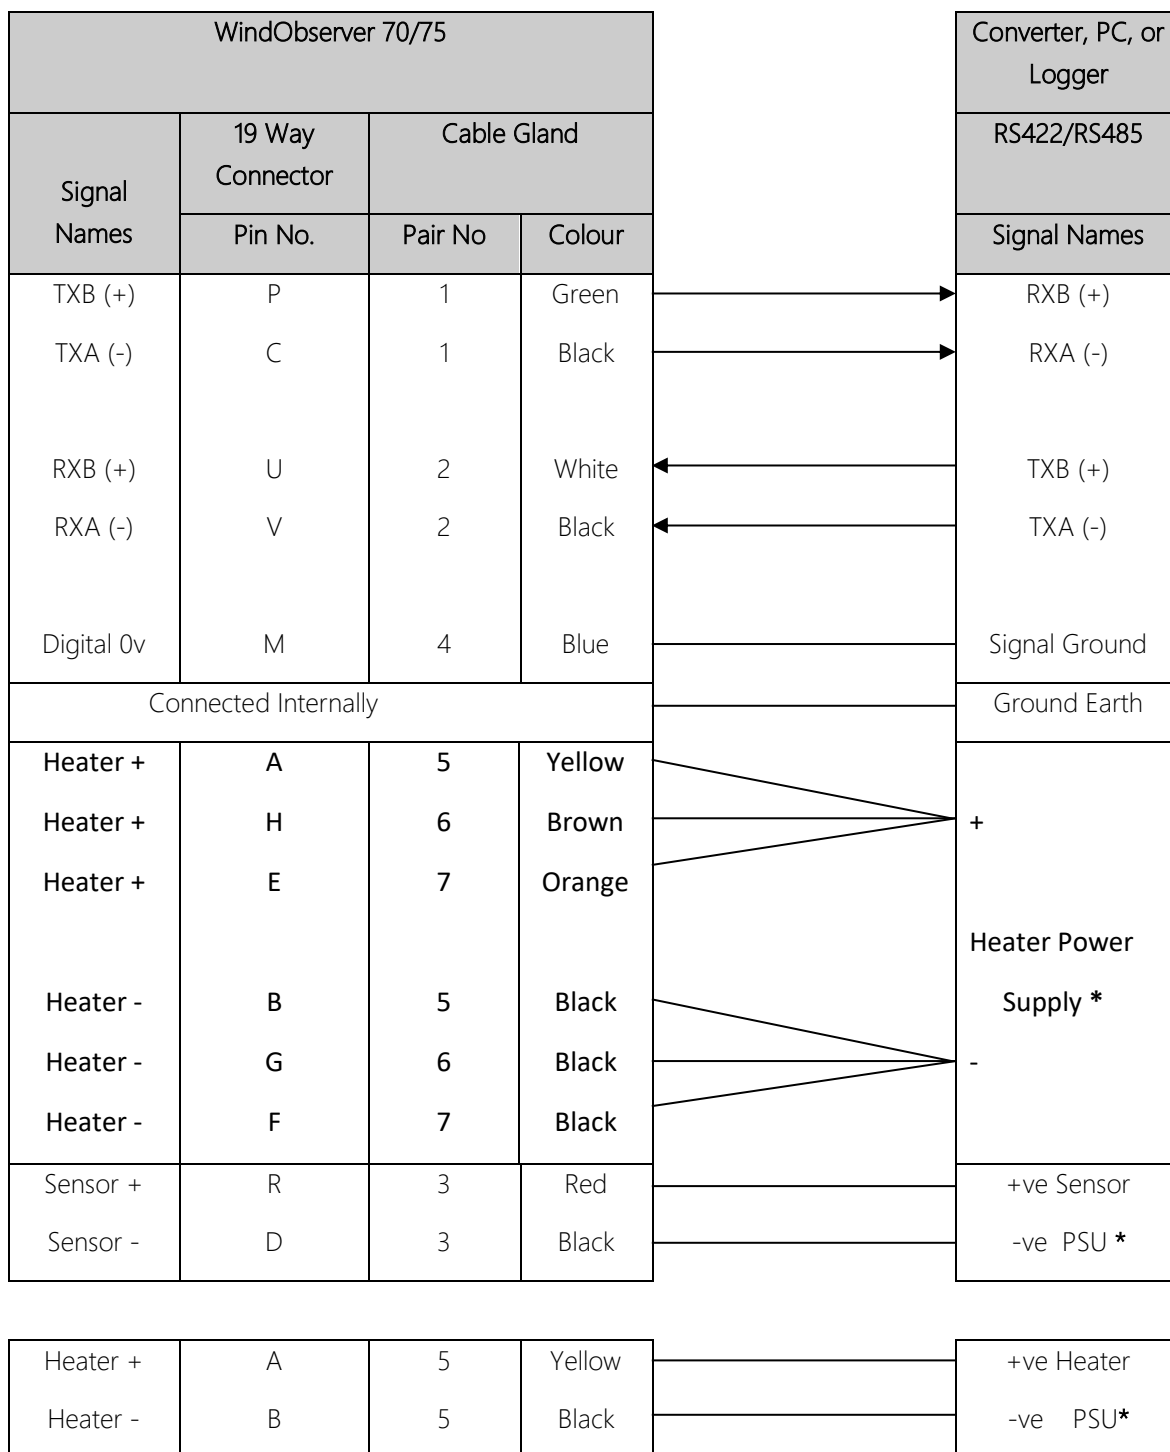


For Power Supply Information see Appendix A

### Appendix D - Networking

Before coupling units into a network:

- Each device must be configured with a unique Unit Identifier (letter A to Z) however in multi drop systems it could be advised to avoid using letters A-F, KMN and P as they could appear in the data string.
- Unit must be set for half duplex mode (E2 setting) see Half Duplex Operation (page 48 ).
- It must be configured to a tri-state polled mode [M3](#) or [M4](#).

See also Appendix F - Configuring

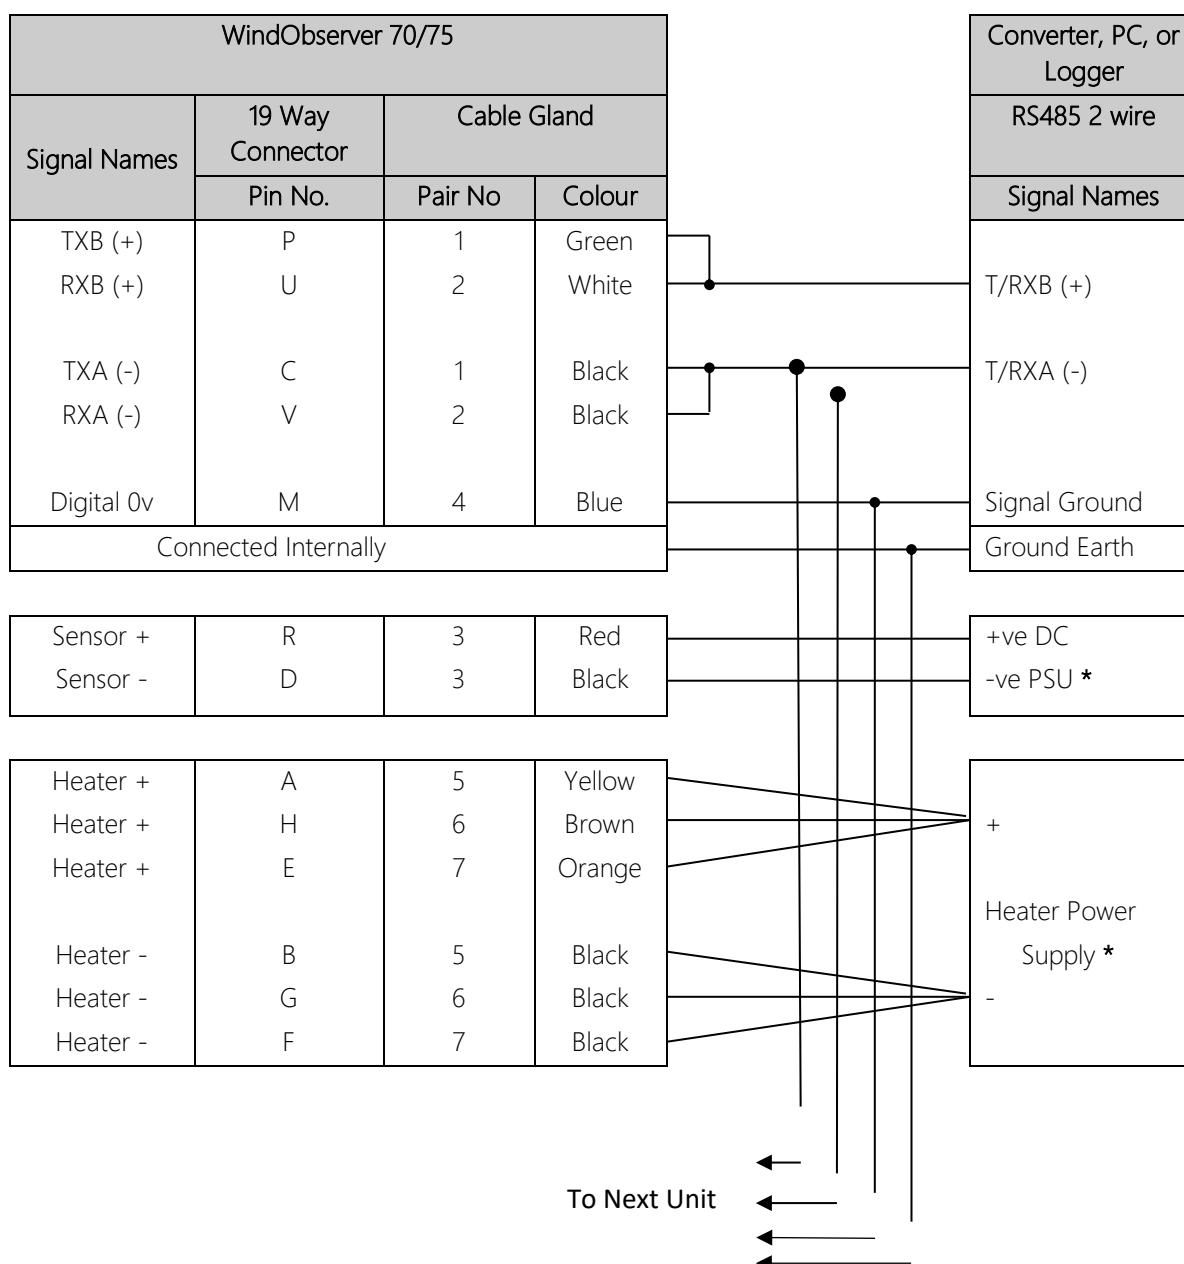

\*For Power Supply Information see Appendix A.



Each unit in the network will require its own power supplies.

### Gill Proprietary Network

In these modes the communications transmit line is tri-state unless the anemometer is responding to a command. If used in a multi drop system then it is recommended that Unit Identifiers A, B, C, D, E, F, K, M, N and P are not used.

#### Equipment required for configuring full/half duplex:

- DC power supply, capable of providing 9 to 30vdc & 55mA.
- Pair of serial to USB adaptors, 1 for RS422 & 1 for 2-wire RS485.
- PC with a terminal package installed.



Power must not be disconnected from the anemometer throughout this procedure.

### Configuring WindObserver 70/75 for Half Duplex Operation:

#### Process:

1. Connect both serial to USB adaptors to the PC and open a terminal connection for each one.
2. Connect the WindObserver to the power supply and wire the RS422 output to the RS422 adaptor (reference appendix C for details).
3. Power up the WindObserver, data should begin scrolling in the RS422 terminal window.
4. Enter **configuration mode** (reference Appendix F for details) and type **E2 <ENTER>** to set half duplex. The **confirm** prompt will appear.
5. Disconnect the WindObserver from the RS422 adaptor and connect it to the RS485 adaptor. **Power must remain to the WindObserver at this point.**
6. In the RS485 terminal window type **E <ENTER>** to confirm. The WindObserver will now be set for half duplex.

### Configuring WindObserver 70/75 for Full Duplex Operation:

1. Follow steps 1 & 2 above.
2. Connect the WindObserver to the RS485 adaptor and in the terminal window place the unit into **configuration mode**.
3. Type **E1 <ENTER>** to set full duplex, the **confirm** prompt will appear.
4. Disconnect the WindObserver from the RS485 adaptor and connect it to the RS422 adaptor. **Power must remain to the WindObserver at this point.**

In the RS422 terminal window type **E <ENTER>** to confirm. The WindObserver will now be set to full duplex.

### Appendix E - WindObserver 70/75 Safe Mode



If a unit is received that will not communicate or the configuration settings are not known, then Safe Mode can be used to establish communication with the WindObserver 70/75 and change configuration settings.

#### Initial Set Up.

The WindObserver 70/75 RS422 Pair 1 and Pair 2 TX and RX output connections (4 wires) are connected to a PC via an RS422 to RS232/USB Converter.

Open a Terminal program e.g., TeraTerm or puTTY (or use Gill Wind Software as a Terminal program).

Select the required COM port.

Set the Baud rate to 19200 baud (if using the Wind Terminal program it opens at 19200 baud).

#### To Place the unit into Safe Mode.

Turn off the WindObserver 70/75.

Ensure the Terminal program is set for 19200 baud,

Hold down the PC keyboard \* key and turn on the WindObserver 70/75 Power Supply.

The words SAFE MODE should appear on the terminal screen.

If not then power down the WindObserver 70/75, hold the \* key and re-power sensor.

To now check the unit: -

Type D1 and press Enter, to see serial number.

Type D2 and Press Enter to see Firmware version.

Type D3 to see configuration settings,

```
SAFE MODE
D1
F922036
D1
D2
5.00
D2
D3
current configuration :
A0 B2 C1 E1 F1 0000 H2 J1 K1 L1 M5 NA O2 P1 T1 U1 V1 X1 Y1 Z1
```

Change settings if required.



Type Q and press Enter to go back into measurement mode.

If powering down the instrument and repowering and no change has been made to the baud rate (B command) then open a new terminal program at the units original baud rate setting (the default setting would be 9600 Baud).

### Appendix F - Configuring



The WindObserver 70/75 can be configured using Terminal emulator software such as puTTY or TeraTerm.

Alternatively, it is possible to use Gill Wind Software as a Terminal program only (Wizard and Sync Comms not applicable). Wind will run on PC's up to and including Windows 11 and can be downloaded from:-

<http://www.gillinstruments.com/main/software.html>.

#### Configuring using Terminal Program



**Note** – Most terminal emulators are configured in a very similar way.

1. Decide on an available Com port that you want to use (Usually Com1).
2. Run preferred terminal package such as Wind,Tera Term, puTTY etc.
3. Create a New Connection (File → New Connection)
4. Enter a **Name** (eg WindObserver 70/75) .
5. Select the required Com port.
6. Adjust the Port settings to match WindObserver settings. WindObserver default settings are :

**Bits per second** 9600

**Data bits** 8

**Parity** None

**Stop bits** 1

**Flow Control** (Handshaking) None

Click on OK and data similar to the following example will scroll on screen at the output rate:

☺A, 229, 002.74, M, 00, ♥06

#### Entering Configuration mode

From Continuous mode

Type \*

From Polled mode

Type \*N - where N is the Unit Identifier.



- the Unit Identifier must be entered as upper-case

The WindObserver 70/75 responds with a CONFIGURATION MODE message, stops reporting wind measurements, and waits for a command (as detailed below).



### Returning to Measurement mode

Type Q and press ENTER

If in **Continuous** mode, the anemometer responds with wind measurements immediately, continuing at the selected Sampling rate.

If in **Polled** mode,

? Enables poll

N Polls anemometer (where N is the Unit identifier entered as upper-case)

The anemometer replies with a single set of wind measurements

& Anemometer replies with Unit identifier

! Disables poll

Note:- If the unit is in Polled Mode it is always best to interrogate the unit for data with a ? Before the poll identifier to cater for the event that the power has been switched off or power interrupted.

If used in a multi drop system then it is recommended that Unit Identifiers A, B, C, D, E, F, K, M, N and P are not used.

### Checking the configuration

We strongly recommend that, as a standard procedure, you use this command ( D3 ) prior to, and after, changing any settings. It shows the current settings for all the alterable settings. We suggest you note down your settings, so that you can easily return to them.

Type \* Enters Configuration Mode (from Continuous mode)

Or Type \*N Enters Configuration Mode (from Polled mode)

Type D3 and press ENTER

The WindObserver 70/75 responds with the current configuration settings.

The factory default settings for a heated unit are: -

A0 B3 C1 E1 F1 G0000 H2 J1 K1 L1 M2 NA O1 P1 T1 U1 V1 X1 Y1 Z1

Or factory default settings for an unheated unit are:-

A0 B3 C1 E1 F1 G0000 J1 K1 L1 M2 NA O1 P1 T1 U1 V1 X1 Y1 Z1

To return to Measurement mode Type Q and press ENTER How to change these settings is explained in the following sections.

### Configuration Settings

Ax – N/A

#### Bx - Baud Rate

| Setting     | Configuration code                                              |
|-------------|-----------------------------------------------------------------|
| 2400        | <span style="border: 1px solid blue; padding: 0 2px;">B1</span> |
| 4800        | <span style="border: 1px solid blue; padding: 0 2px;">B2</span> |
| <b>9600</b> | <span style="border: 1px solid blue; padding: 0 2px;">B3</span> |
| 19200       | <span style="border: 1px solid blue; padding: 0 2px;">B4</span> |
| 38400       | <span style="border: 1px solid blue; padding: 0 2px;">B5</span> |
| 1200        | <span style="border: 1px solid blue; padding: 0 2px;">B6</span> |

To change the Baud rate when using a terminal package: -

Eg. If set to B3 (9600 baud) and it is required to set to Baud rate to B2 (4800 baud).

Type \* to enter Configuration Mode.

Type B 2 and press ENTER (Do not type any further commands at this stage)

Open the terminal settings and select the new Baud rate as 4800.

Type B and press ENTER, the letter B will be shown followed by B2

Type Q and press ENTER, data will scroll at the new baud rate.

#### Cx- Analogue Output Polar Mode Direction Wraparound

| Setting               | Configuration code                                              |
|-----------------------|-----------------------------------------------------------------|
| Wraparound (0 - 539°) | <span style="border: 1px solid blue; padding: 0 2px;">C1</span> |
| Standard (0-360°)     | <span style="border: 1px solid blue; padding: 0 2px;">C2</span> |

### Dx- Diagnostic and Configuration Command (see Appendix L) (Bench Test)

Each of these commands causes a response from the WindObserver 70/75.

| Item                                               | Command code | Typical response                                                                         |
|----------------------------------------------------|--------------|------------------------------------------------------------------------------------------|
| Type and serial No.                                | D1           | *12400001 (where * = E (Unheated unit), F = (Heated unit))                               |
| Software version                                   | D2           | 6.09                                                                                     |
| Unit configuration                                 | D3           | Current configuration:<br>A0 B3 C1 E1 F1 G0000 H2 J1 K1 L1 M2 NA O1 P1 T1 U1 V1 X1 Y1 Z1 |
| Anemometer power supply voltage                    | D5           | +29.8                                                                                    |
| Integrity check                                    | D6           | See Appendix K (Bench Test)                                                              |
| Reports direction with a resolution of 1 degree    | DR0          |                                                                                          |
| Reports direction with a resolution of 0.01 degree | DR2          |                                                                                          |



The commands DR0, DR2 are only available on units running firmware V6.09

(Serial numbers 20310001 onwards)

### Ex - Full Duplex/Half Duplex Mode

| Setting     | Configuration code |
|-------------|--------------------|
| Full duplex | E1                 |
| Half duplex | E2                 |



Refer also to Appendix D, Networking.

### Fx- Data and Parity Options

| Setting                         | Configuration code |
|---------------------------------|--------------------|
| 8 bits, no parity, 1 stop bit   | F1                 |
| 8 bits, even parity, 1 stop bit | F2                 |
| 8 bits, odd parity, 1 stop bit  | F3                 |



**Note:** If changing to F2, using a terminal program then when in configuration mode Type F2 and press Enter, close the terminal program and open a new one with F2 Even parity settings, then type F and press Enter.

### Gx to Gxxxx - Averaging (Digital Outputs only)

| Setting             | Configuration code |
|---------------------|--------------------|
| Averaging (Default) | G0000              |

Enter the required averaging period in seconds as a four-figure number between 0000 and 3600.

### Hx - Heating (If fitted)

Heating is autonomous and requires no set-up once activated.

| Setting   | Configuration code |
|-----------|--------------------|
| Disabled  | H1                 |
| Activated | H2                 |
| Activated | H3                 |

### Jx - (N/A)

### Kx – NMEA Settings

| Setting             | Configuration code |
|---------------------|--------------------|
| NMEA string "IIMWV" | K1                 |
| NMEA string "WIMWV" | K2                 |

### Lx - ASCII Message Terminator

| Setting | Configuration code |
|---------|--------------------|
| CR LF   | L1                 |
| LF      | L2                 |

### Mx to Mxx - Message Format

| Output format                    | Configuration code |
|----------------------------------|--------------------|
| ASCII UV Continuous              | M1                 |
| ASCII Polar Continuous           | M2                 |
| ASCII UV Polled (tri-state) *    | M3                 |
| ASCII Polar Polled (tri-state) * | M4                 |
| NMEA Continuous                  | M5                 |



\* If units are to be networked, they MUST be given unique Unit Identifiers

### Nx – Unit Identifier Address

| Item                       | Options        | Command |
|----------------------------|----------------|---------|
| Unit Identifier<br>Address | A... -(A to Z) | N<A>    |

If used in a multi-drop system then it is recommended that ID's A to F and K, M, N and P are not used, as these characters can be present in the data string.

### Ox – ASCII Output Format (Output String Padding)

| Setting                        | Configuration code |
|--------------------------------|--------------------|
| Comma Separated Variable (CSV) | <b>O1</b>          |
| Fixed Field                    | <b>O2</b>          |

Example data strings: -

| POLAR                                                            | NMEA                                                             |
|------------------------------------------------------------------|------------------------------------------------------------------|
| <b>CSV</b> data changing to error status code condition.         | <b>CSV</b> data changing to error status code condition.         |
| A,235,000.77,M,00,0A                                             | \$IIMWV,191,R,000.55,M,A*19                                      |
| A,,,M,04,24                                                      | \$IIMWV,,R,,M,V*29                                               |
| <b>Fixed Field</b> data changing to error status code condition. | <b>Fixed Field</b> data changing to error status code condition. |
| A,266,000.73,M,00,08                                             | \$IIMWV,191,R,000.55,M,A*19                                      |
| A,999,999.99,M,04,0A                                             | \$IIMWV,999,R,999.99,M,V*07                                      |

### Px - Output Rate

| Outputs per second | 1         | 2         | 4         |
|--------------------|-----------|-----------|-----------|
| Configuration code | <b>P1</b> | <b>P3</b> | <b>P2</b> |

### Q- Measurement Mode

See page 49

### RWASHORT XX – (Short term number)

Where XX = 10 to 60, associated with Mode 14 and Mode 15 averaging.

### RWALONG XX – (Long term number)

Where XX = 1 to 10, associated with Mode 14 and Mode 15 averaging.

### Tx - (N/A)



### Ux – Digital Output Units

| Units              | metres/sec<br>(m/s) | knots<br>(knots) | miles / hour<br>(MPH) | kilometre/hour<br>(kph) | feet / minute<br>(fpm) |
|--------------------|---------------------|------------------|-----------------------|-------------------------|------------------------|
| Configuration code | U1                  | U2               | U3                    | U4                      | U5                     |

### Vx- Vertical Output Padding

| Setting                         | Configuration code |
|---------------------------------|--------------------|
| Disable vertical output padding | V1                 |
| Enable vertical output padding  | V2                 |

### Xx - 45° Alignment Offset/Inverted Operation

| Setting                              | Configuration code | Notes                                                                                                                                  |
|--------------------------------------|--------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Align U axis with transducer axis    | X1                 | X1. Aligns U axis with North/South axis.                                                                                               |
| Align U axis +45° to transducer axis | X2                 | X2. This re-aligns both U&V and polarity 45° to transducer axis.                                                                       |
| Reverses Polar Direction             | X3                 | X3 reverses reported polar direction to allow the instrument to be mounted upside down. N.B. Does NOT affect UV alignment (Mode 1, 3). |
| Align @ 45° from North               | X4                 | X4 set polar alignment at 45 degrees from North when instrument is mounted upside down.<br>Does NOT affect UV alignment (Mode 1, 3).   |

Figure 4 shows the polarity of U and V if the wind components along the U and V axis are blowing in the direction of the respective arrows.

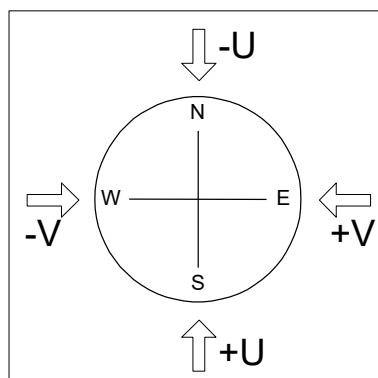


Figure 4 UV Polarity

### Appendix G - WindObserver 70/75 ASCII Data Output

#### WindObserver 70/75 default ASCII data

NODE, DIR, SPEED, PRESS, RH, TEMP, DEWPOINT, PRT, AN1, AN2, DIG1, VOLT, STATUS

<STX>Q,121,000.06,M,+344.66,+21.76,00 <ETX>06

Where:-

|                 |                |
|-----------------|----------------|
| Start of String | STX            |
| Q               | Node letter    |
| 121             | Wind direction |
| 000.06          | Wind speed     |
| M               | Units          |
| +344.66         | Speed of Sound |
| +021.76         | Temperature    |
| 00              | Status code    |
| End of String   | ETX            |
| 06              | Checksum       |

#### NOTES:

<STX> is the Start of String character (ASCII value 2).

<ETX> is the End of String character (ASCII value 3).

Checksum, the 2 digit Hex Checksum sum figure is calculated from the Exclusive OR of the bytes between (and not including) the STX and ETX characters.

### Appendix H - WindObserver 70/75 NMEA 0183 Data Output

#### WindObserver 70/75 [NMEA0183](#)

When reporting in NMEA0183 format the following sentences will be used

- **MWV** sentence to report wind direction and speed

In each case \*hh is a checksum, the 2 digit Hex Checksum sum figure is calculated from the Exclusive OR of the bytes between (and not including) the \$ and \* characters.

<CR> is a Carriage return character (ASCII hex value d)

<LF> is a Line Feed Character (ASCII hex value a)

#### [MWV - Wind direction/speed](#)

|  |   |   |  |   |   |   |
|--|---|---|--|---|---|---|
|  | 1 | 2 |  | 3 | 4 | 5 |
|  |   |   |  |   |   |   |

\$--MWV,x,a,x.x,a,\*hh<CR><LF>

Field Number:

1. Direction
2. R - relative
3. Speed
4. Units N - Knots
5. Validity flag, A - Valid, V - invalid

Example

\$WIMWV,105,R,000.03,N,V\*1D

### Appendix I - Polled Mode Commands

#### ASCII Polled (UV and Polar)

When in the Polled mode, an output is only generated when the host system sends a Poll signal to the WindObserver consisting of the WindObserver Unit Identifier – that is, the relevant letter A – Z.

The output formats are otherwise as described above.

The commands available in this mode are:

| Description                          | Command   | WindObserver response       |
|--------------------------------------|-----------|-----------------------------|
| WindObserver Unit Identifier         | A ..... Z | Wind speed output generated |
| Enable Polled mode                   | ?         | (None)                      |
| Disable Polled mode                  | !         | (None)                      |
| Request WindObserver Unit Identifier | &         | A ..... Z (as configured)   |
| Enter Configuration mode             | *<N>      | CONFIGURATION MODE          |

Where <N> is the unit identifier, if used in a multi-drop system then it is recommended that ID's A to F and KMNP are not used as these characters can be present in the data string.

It is suggested that in polled mode the following sequence is used for every poll for information.

? Ensures that the Sensor is enabled to cover the event that a power down has occurred.

A-Z Appropriate unit designator sent to retrieve a line of data.

! Sent to disable poll mode and reduce possibility of erroneous poll generation.

When in polled mode the system will respond to the data command within 30mS with the last valid data sample as calculated by the Output rate (P Mode Setting).

If the unit is powered down after use or upon switch on then allow 3 seconds from switch on before sending poll commands.

### Appendix J – WindObserver Modbus:

#### Modbus RTU Protocol (WindObserver Modbus only)

Ideal for any networked installation of devices, the Modbus RTU protocol provides data in several different formats.

#### RS-485 Networking

Multiple units can be connected on the same 2-wire RS-485 network.

Note that:

- each unit must be configured with a different Modbus slave address
- the typical response time of the unit to a Modbus poll is in the order of 10 milliseconds
- the maximum response time of the unit to a Modbus poll is in the order of 3 seconds
- a delay of at least 2 milliseconds must be respected between consecutive Modbus polls

#### Function Code Support

The following Modbus Function Codes are supported in order to return data from the unit:

- 03: Read Holding Registers - to return measurements
- 17: Report Server (slave) ID - to return unit information

#### Requesting Measurement Data

Modbus Function code 03 Read Holding Registers is used to return measurements from the unit.

#### Register Numbering And Ranges

Note - in Modbus terminology the first register is referred to as number 1, but 'on-the-wire' the address of that register is 0.

The register ranges used in this device are as follows:

- 2,000+ for 32-bit IEEE 754 floating point data format.
- 4,000+ for 32-bit integer data format.
- 6,000+ for 16-bit integer data format.

### Available Registers

The complete list of available registers, their location, format and units is shown below. Note that SI units are used for all available data items.

| Item                               | Units   | 32-bit float register address | 32-bit integer registers address | 16-bit integer register address | Definition                                                     |
|------------------------------------|---------|-------------------------------|----------------------------------|---------------------------------|----------------------------------------------------------------|
| Speed                              | m/s     | 2001                          | 4001                             | 6001                            | Wind speed (polar magnitude).                                  |
| Direction                          | degrees | 2003                          | 4003                             | 6002                            | Wind direction (polar).                                        |
| U-axis velocity                    | m/s     | 2005                          | 4005                             | 6003                            | Signed wind speed magnitude (vectorial).                       |
| V-axis velocity                    | m/s     | 2007                          | 4007                             | 6004                            | Signed wind speed magnitude (vectorial).                       |
| Max gust speed                     | m/s     | 2009                          | 4009                             | 6005                            | Maximum gust speed.                                            |
| Max gust direction                 | degrees | 2011                          | 4011                             | 6006                            | Maximum gust direction.                                        |
| Long-term Vector-Average Speed     | m/s     | 2025                          | 4025                             | 6013                            | Average speed – see ‘Road Weather Averaging’ section 5.5.2     |
| Long-term Vector-Average Direction | degrees | 2027                          | 4027                             | 6014                            | Average direction – see ‘Road Weather Averaging’ section 5.5.2 |
| Extended Status Flags              | flags   | N/A                           | 4021                             | 6011                            | Engineering diagnostics.                                       |
| WindObserver Status Flags          | flags   | N/A                           | 4035                             | 6018                            | The WindObserver Status Code - see Appendix M                  |

### Measurement Register Scaling

Available measurements are available in three data formats, with different scaling factors in order to accommodate data that includes decimal fractions:

- 32-bit float - no scaling
- 32-bit integer - scaled x 100 (except status flags)
- 16-bit integer - scaled x 10 (except status flags)

### Invalid Measurement Values

If a valid request is made for a measurement or other value which is unavailable, an “invalid” value will be indicated by:

- 32-bit float - 0x7FC00000 (hexadecimal - NaN)
- 32-bit integer - 0x7FFFFFFF (hexadecimal)
- 16-bit integer - 0x7FFF (hexadecimal)

### Appendix K – WindSet Software

The Gill WindSet application provides the user with a simple interface to configure the WindObserver Modbus. The application installer, and user manual can be downloaded from the Gill Instruments Limited website [gillinstruments.com/software](http://gillinstruments.com/software).

#### Using WindSet to set up WindObserver Modbus

WindSet can be used to change the set-up as required. WindSet can be used to:

- Change the Modbus communications set-up
- Configure the user-defined strings

Run the application and follow the instructions to connect to the target device.

#### Using WindSet to change the communications protocol

The COMMUNICATIONS screen can be used to select the protocol parameters used by the WindObserver Modbus. To configure the protocol parameters:

1. Select the Slave address of the WindObserver. This address must be used by the master Modbus device to address this unit.
2. Set the serial baud rate (to be the same as the master Modbus controller is using).
3. The stop bits and parity (to be the same as the master Modbus controller is using).

#### Using WindSet to change User Defined Strings

The SYSTEM screen can be used to change the User Defined Strings used by WindObserver.

User Defined Strings can be used for a number of purposes including:

- Additional identification information (e.g. longitude and latitude information, site name, etc.)
- Additional device information (e.g. last inspection date)
- Additional set-up explanation

Each User Defined String can contain up to 16 characters.



### Appendix L - WindView Software

#### Introduction


Gill WindView Software can be downloaded from <http://gillinstruments.com/main/software.html>

Gill Wind View will run on PC's with Windows XP onwards operating systems.




#### Connect to an Instrument using Gill WindView Software

Open WindView Software.

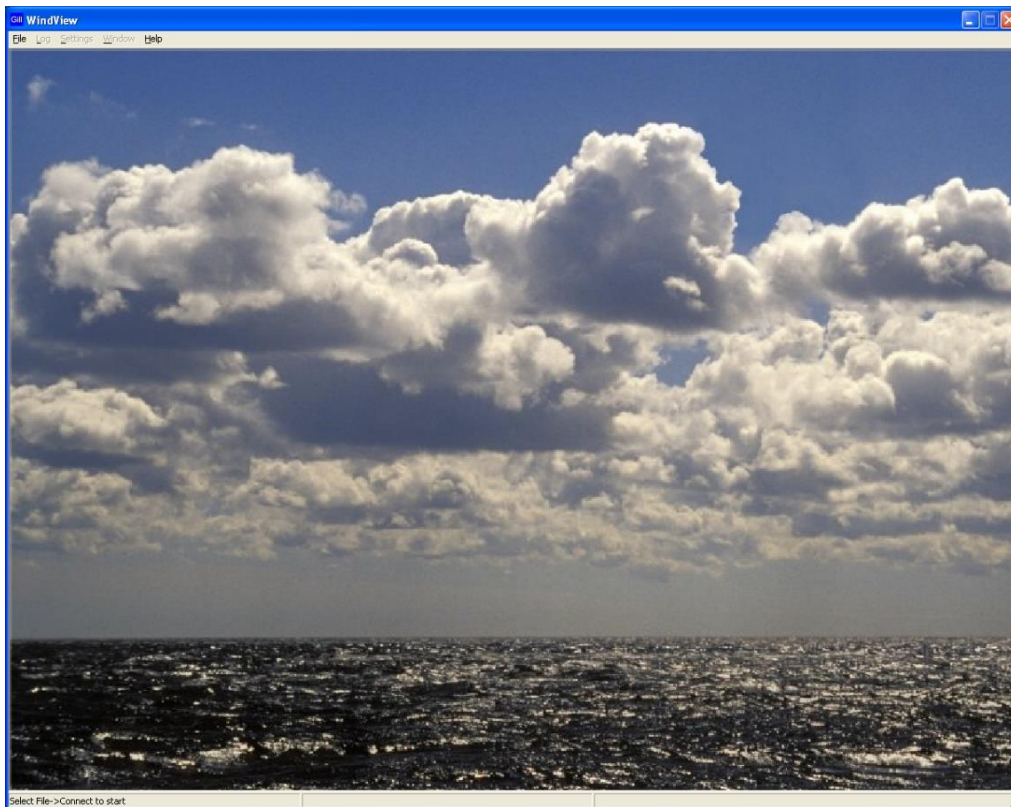


Select File/Connect.

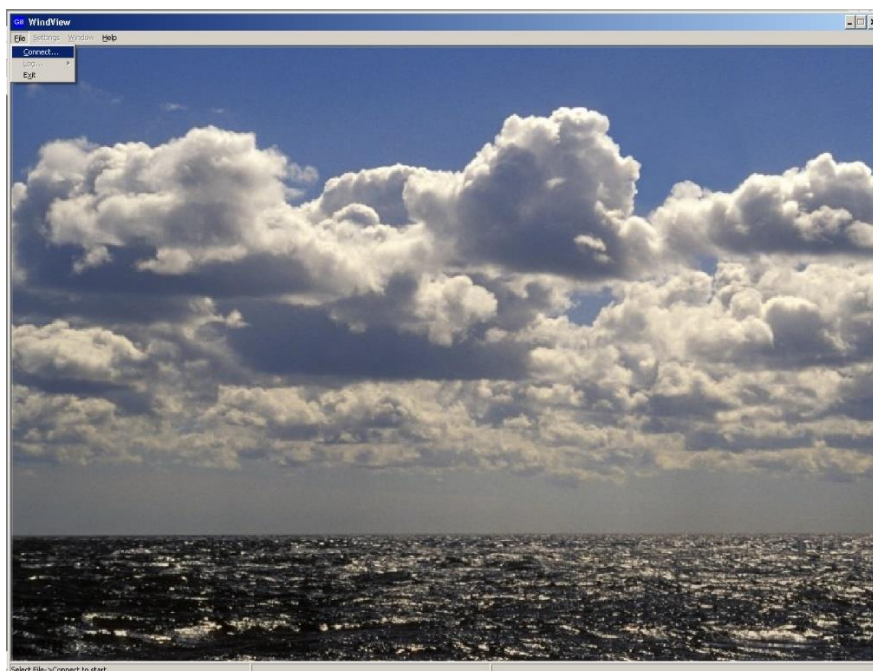

The default connection name is Anemometer 1, it can be re-named if required.

Select the Output Format to match the Sensor format i.e. the WindObserver default format is Gill Polar (2 axis).

If the WindObserver were set for UV or NMEA output then choose the appropriate format setting from the drop down menu.

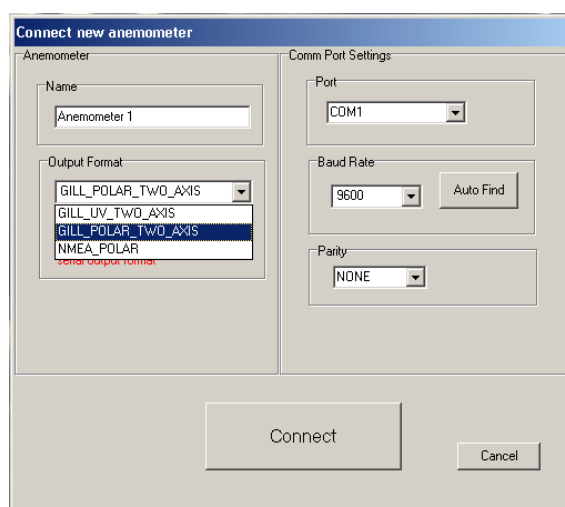


From the Port drop down menu select the PC COM Port to which the WindObserver is connected to e.g. COM 9.


Select the Baud rate setting from the drop down menu to match that of the Windobserver, the WindObserver default baud rate is 9600 baud.

Leave Parity setting at none.

Click on Connect.

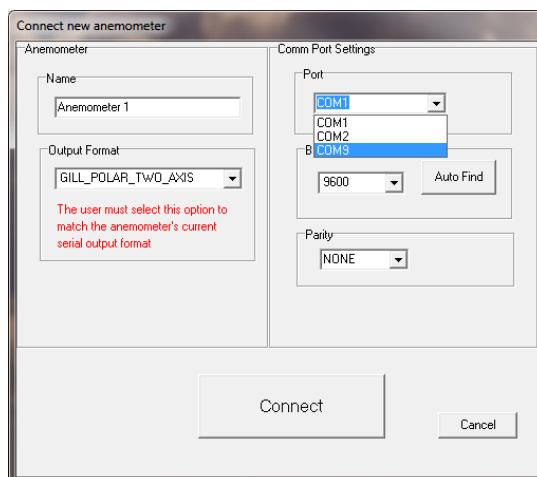


The Data button screen will show the WindObserver data scrolling on screen updated at the WindObserver Output rate.

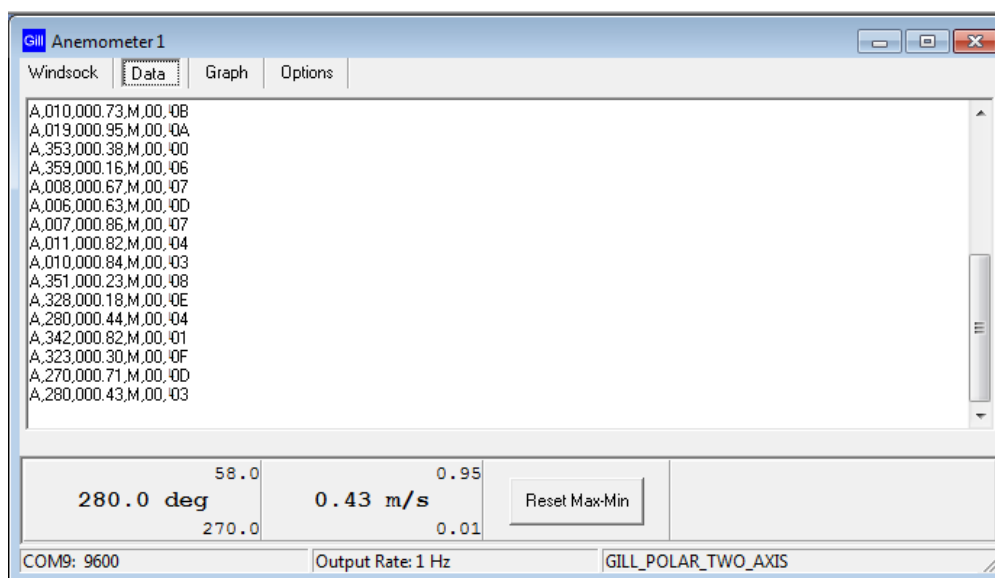

### WindSock Function

Click on the WindSock button to give a Direction display and digital readout of Direction and Wind Speed:-

On screen Maximum and Minimum readings of Wind speed and Directions are also displayed digitally and can be reset using the Reset Max/Min button.

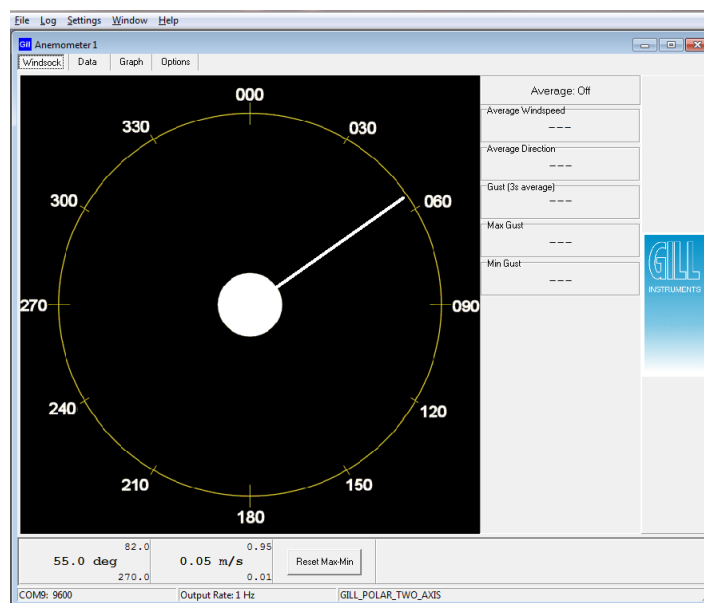

### Logging Data

To Log WindObserver data, from the WindView top menu select Settings/Logging.


If segmented log files are required tick the Enable box and select the length of each log file.

Tick the Record Formatting box options for Appending PC Time and Date Stamp and sequential line numbering as required.


Date and Time are taken from the PC clock.

The Log Description box allows a free text file header to be added to the log file.

Save the Log file to the required Directory.

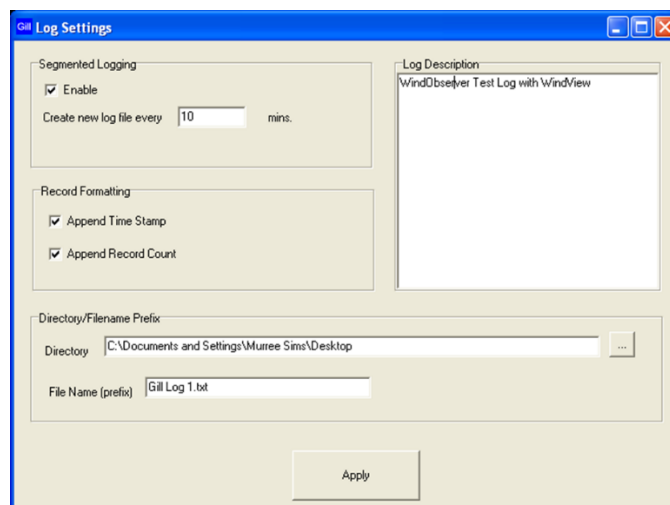

Click on Apply gives the following screen, click on OK:-

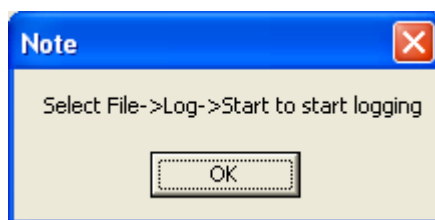

### To Start Logging.

From the top menu select Log.

Click on Log/Start to commence logging.

### To Stop Logging.

From the top menu select Log.

Click on Log/Stop to stop logging.

The logged data is saved to a PC text file that can be opened with Notepad or equivalent and the following example illustrates the saved time/date stamped WindObserver data.



The Date and time information are taken from the PC Clock.

```
Gill Log 1 [Anemometer 1]-0.txt - Notepad
File Edit Format View Help
windview Log File
windobserver Test Log with windview
Name: Anemometer 1
Output Format: GILL_POLAR_TWO_AXIS
Log file opened: 06/10/2010 08:38:30

A,351,000.02,M,60,00D,1,06/10/2010 08:38:31
A,351,000.02,M,60,00D,2,06/10/2010 08:38:32
A,351,000.01,M,60,00E,3,06/10/2010 08:38:33
A,351,000.01,M,60,00E,4,06/10/2010 08:38:34
A,351,000.00,M,60,00F,5,06/10/2010 08:38:35
A,351,000.02,M,60,00D,6,06/10/2010 08:38:36
A,351,000.02,M,60,00D,7,06/10/2010 08:38:37
A,351,000.01,M,60,00E,8,06/10/2010 08:38:38
A,351,000.01,M,60,00E,9,06/10/2010 08:38:39
A,351,000.01,M,60,00E,10,06/10/2010 08:38:40
A,351,000.00,M,60,00F,11,06/10/2010 08:38:41
A,351,000.01,M,60,00E,12,06/10/2010 08:38:42
A,351,000.01,M,60,00E,13,06/10/2010 08:38:43
A,351,000.00,M,60,00F,14,06/10/2010 08:38:44
A,351,000.00,M,60,00F,15,06/10/2010 08:38:45
```

The logged Wind Data .txt file can be imported into Microsoft Excel if it is required to manipulate the data or graph plot the data.

### Appendix M - WindObserver 70/75 Status Codes

WindObserver 70/75 is able to include a status code in each measurement string to confirm the reliability of the data or to highlight any potential issues. A list of the status code is provided below.

**Note:** Status Codes 60 to 69 are only applicable to a unit with the heating option.

| Code    | Status                                                 | Condition                                                                                               |
|---------|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| 00      | OK Heating set off                                     | Valid data, sufficient samples in average period                                                        |
| 60 (H2) | OK and heating enabled                                 | Valid data, sufficient samples in average period                                                        |
| A       | OK                                                     | NMEA data Acceptable                                                                                    |
| 01      | Axis 1 failed                                          | Insufficient samples in average period on U axis                                                        |
| 02      | Axis 2 failed                                          | Insufficient samples in average period on V axis                                                        |
| 04      | Axis 1 and 2 failed                                    | Insufficient samples in average period on both axes                                                     |
| 08      | NVM error                                              | NVM checksum failed, data could be uncalibrated.                                                        |
| 09      | ROM error                                              | ROM checksum failed; data could be uncalibrated.                                                        |
| 51      | Measurement average building.                          | Data valid but warns that average period not reached when averaging used (non-heat enabled units only). |
| 62 (H2) | No power to heating module                             | Valid data still output                                                                                 |
| 63 (H2) | Hardware fault – e.g. Heater pcb faulty                | Valid data still output.                                                                                |
| 65 (H2) | Warning – Heater Supply volts too high or pcb too hot. | Valid data still output.                                                                                |
| V       | NMEA data Void                                         | Invalid data output                                                                                     |
| 66 (H3) | OK and heating enabled                                 | Valid data, sufficient samples in average period                                                        |
| 67 (H3) | No power to heating module                             | Valid data still output.                                                                                |
| 68 (H3) | Hardware fault – e.g. Heater pcb faulty                | Valid data still output.                                                                                |
| 69 (H3) | Warning – Heater Supply volts too high or pcb too hot. | Valid data still output.                                                                                |

### Appendix N - Maintenance & Fault-Finding

#### Cleaning and Handling

When installing the unit handle with lint free gloves and degrease the unit to reduce the build-up of deposits.

If there is any build-up of deposit on the unit, it should be gently cleaned with a cloth, moistened with soft detergent. Solvents should not be used, and care should be taken to avoid scratching any surfaces. The unit must be allowed to defrost naturally after being exposed to snow or icy conditions, do NOT attempt to remove ice or snow with a tool.



**Do NOT remove black “rubber” transducer caps.**

#### Servicing

There are no moving parts or user-serviceable parts requiring routine maintenance.

Opening the unit or breaking the security seal will void the warranty and the calibration.

In the event of failure, prior to returning the unit to your authorised Gill distributor, it is recommended that:

- All cables and connectors are checked for continuity, bad contacts, corrosion etc.
- A bench test is carried out as described on page 66
- Contact your supplier for advice if failure persists.

| Symptom                                                         | Solution                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No output                                                       | <p>Check DC power to WindObserver 70/75, cable and connections.</p> <p>Check comms settings of WindObserver 70/75 (as detailed in Appendix F) and host system match, including correct Com port.</p> <p>Check unit is in Continuous mode.</p> <p>Check that in-line communication devices are wired correctly.</p> <p><b>NOTE:</b> It is usual for Anemometer TX + to be connected to converter device RX +.</p> |
| Corrupted output                                                | <p>Check comms settings of WindObserver 70/75 and host system match.</p> <p>Try a slower baud rate.</p> <p>Check cable lengths and type of cable.</p>                                                                                                                                                                                                                                                            |
| One way communication                                           | Check wiring is in accordance with the manual.                                                                                                                                                                                                                                                                                                                                                                   |
| Failed / Incorrect WindObserver 70/75 output, data invalid flag | Check that transducer path is not blocked.                                                                                                                                                                                                                                                                                                                                                                       |



### Bench Test

1. Couple the WindObserver 70/75 to the host system and power supply, using a known working test cable.
2. Check that the unit is correctly configured by going into Configuration mode and using D3 See *Appendix F (page 49) Checking the Configuration*.
3. Check for normal output data, and that the Status Code is OK – 00, 60 or A (for NMEA format).
4. If the status code is other than these, refer to Appendix K Status (error) codes.
5. Use an office fan or similar to check that the unit is sensing wind, turning the unit to simulate changing wind direction and to check that both axes are functioning.
6. Note that this is a quick functional test. There are no calibration adjustments; the unit is designed NOT to require re-calibration within its lifetime. Gill has provided an Integrity Check, see next page for details.

### Use of an Integrity Check Chamber (Optional item)

The ICC is designed to:

1. Identify any gross changes in the head geometry that would affect the performance.
2. Provide a zero wind environment to confirm the WindObserver 70/75 zero calibration.

The ICC has been designed to be used in an indoor still air environment with an ambient temperature between 17°C and 23°C. When conducting the test it is important that the ICC is assembled on to the WindObserver 70/75 head and not touched or moved during the test.

This test is only valid if undertaken with an ICC purchased from Gill.

Note:- The Heater supply should be disconnected or turned off when using the ICC.

### Zero Wind Check

Configure your PC to run HyperTerminal and assemble the ICC by inserting the reflector cases and the two halves of the ICC onto the WindObserver 70/75. The ICC must be retained using the strips provided. Then:

1. Ensure that the WindObserver 70/75 is set in factory default mode. For Factory default settings see section Appendix F (page 49)
2. Enter Measurement Mode and Record/View data

In still air wind speed measurements should not exceed 0.03m/s. If wind speed exceeds 0.03m/s contact Gill Instruments.



### Alignment Check

Ensure the ICC is assembled correctly on the WindObserver 70/75. Using Terminal Program, enter Configuration Mode as described in Section 8.

Enter D6.

A typical report as shown below will be displayed.

D6

ALIGNMENT LIMITS: U=2424, 2524

V=2434, 2434

ALIGNMENT U: 2474 \*PASS\*

ALIGNMENT V: 2484 \*PASS\*

D6

If 'Refer to Manual' is shown check test temperature conditions are 17 to 23 deg C and tested under zero wind condition.

If there has been no significant changes to The WindObserver 70/75 head configuration then \*PASS\* will confirm correct operation.

Alterations to the head geometry can result in a \*FAIL\* or 'Insufficient Samples' message. If this occurs please contact Gill Instruments.

## Appendix O - Glossary & Abbreviations

| Item                     | Meaning                                                                                                 |
|--------------------------|---------------------------------------------------------------------------------------------------------|
| CAL                      | Calibration                                                                                             |
| CR                       | Carriage Return                                                                                         |
| CRLF                     | Carriage Return Line Feed                                                                               |
| CSV                      | Comma Separated Variable                                                                                |
| ENG                      | Engineering                                                                                             |
| ESC                      | ESCape key on keyboard used to stop any process that is being executed                                  |
| ETX                      | End of string character                                                                                 |
| FAC                      | Factory                                                                                                 |
| fpm                      | Feet per minute                                                                                         |
| GND                      | GrouND                                                                                                  |
| HEX                      | HEXadecimal                                                                                             |
| I/P                      | InPut                                                                                                   |
| IP66                     | Protection Classification                                                                               |
| KPH                      | Kilometres per Hour                                                                                     |
| LF                       | Line Feed                                                                                               |
| m/s                      | Metres per second                                                                                       |
| MAG                      | MAGnitude - scalar reference to wind speed                                                              |
| MAX                      | MAXimum                                                                                                 |
| MPH                      | Miles per Hour                                                                                          |
| NEMA                     | National Electrical Manufacturers Association                                                           |
| NMEA 0183<br>(version 3) | National Marine Electronics Association standard for interfacing marine electronic navigational devices |
| No:                      | Number                                                                                                  |
| NVM                      | Non-Volatile Memory                                                                                     |
| O/P                      | Output                                                                                                  |
| PC                       | IBM compatible Personal Computer                                                                        |
| PCB                      | Printed Circuit Board                                                                                   |
| POR                      | Power On Reset                                                                                          |
| ROM                      | Read Only Memory                                                                                        |
| RS232                    | Communications standard                                                                                 |

| Item  | Meaning                   |
|-------|---------------------------|
| RS422 | Communications standard   |
| RS485 | Communications standard   |
| RTS   | Request To Send           |
| RWA   | Road Weather Averaging    |
| RX    | Receive                   |
| RXD   | Received Data             |
| S/W   | SoftWare                  |
| SOS   | Speed Of Sound            |
| SEC   | SECond                    |
| STX   | Start of string character |
| TERM  | TERMinal                  |
| TX    | Transmit                  |
| TXD   | Transmitted Data          |
| +VE   | Positive                  |
| -VE   | Negative                  |
| WRT   | With Respect To           |

### Appendix P - Guarantee & FCC

For terms of guarantee contact your supplier or refer to the Gill Instruments Terms & Conditions here:

<https://gill.group/wp-content/uploads/Gill-Group-Company-Terms-Conditions-of-Sale-9170-0003-Issue-02-March-20...pdf>

Warranty is void if the green security seal covering base nuts is damaged or broken, or the transducer caps have been damaged.

#### FCC

WindObserver 70/75 complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:-

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### Appendix Q - Principle of operation

The WindObserver 70/75 measures the times taken for an ultrasonic pulse of sound to travel from the North transducer to the South transducer and compares it with the time for a pulse to travel from S to N transducer. Likewise, times are compared between West and East, and E and W transducer.

If, for example, a North wind is blowing, then the time taken for the pulse to travel from N to S will be faster than from S to N, whereas the W to E, and E to W times will be the same. The wind speed and direction (and the speed of sound) can then be calculated from the differences in the times of flight on each axis. This calculation is independent of factors such as temperature.

